



INSTALLATION AND OPERATING INSTRUCTIONS

ROLLING JACKS

MODELS: J6000H/ J7500H/ J7000L/ J9000H/ J12000H/ J15000H/ J18000H/ J25000H/ J35000H/J50000H

INSTALLATION:

Remove your new jack from its shipping container. Place the jack on the jacking beam rails of your drive on lift. Be sure to install the rolling jack on your lift while the lift is in the down position. Extend the roller assembly out to meet the jacking beam rails. Ensure the wheels are in full contact with the rail and that the shoulder of the wheel is right up against the rail. Also ensure the load support bar fully overhangs the jack rails. Once the jack is centered between the runways and running freely forwards and backwards, fix the wheels assemblies in this position. To do this, simply tighten the locking bolts located on the outside of the bottom frame of the jack. Tighten all four bolts firmly using the appropriate sized wrench. These bolts should be tightened firmly enough to keep the assembly from moving in or out. Now connect the supplied coil hose to your lifts air supply.

OPERATION:

1. To raise the jack simply depress the control valve or on the air pump (for hydraulic jacks). The jack will rise immediately. The speed of the jack is controlled through the valve or air pump. The harder you depress the faster the jack will rise.
2. The locking system will engage on the jacks ascent.
3. To lower the jack, first raise it slightly, then disengage the locking system by lifting up the lock release lever. Then slowly depress the valve (or lift the control lever on the air pump).

CAUTION

Always ensure the locks are engaged when the jack is under load.

IMPORTANT!

Ensure the air supply to the lift has a filter lubricator connected. Failure to have a filter lubricator will void the warranty.

MAINTENANCE:

1. Weekly oiling of the air pump for all hydraulic models is required. Use air tool oil and simply place a few drops into the air inlet on the pump.
2. Regularly check the wheel assembly locking bolts. Ensure they are tightened so that the assembly cannot be moved in or out.
3. Regularly lubricate the main pins, roller bearings and any available grease zerks.
4. Do not wash the jack with water or any chemicals. This will cause premature corrosion.

DANGER

DO NOT MOVE
DRIVE ON RAMPS
ONCE JACKS HAVE
BEEN INSTALLED.

Stan Design Inc.
264 Bloor St. W.
Suite 22576
Toronto, Ontario, Canada
Free: 1(866) STAN JAX
www.standesigninc.com

WARRANTY REGISTRATION CARD

This card must be completed and returned within 30 days, to validate your warranty.

NAME OF PURCHASER _____
ADDRESS _____ CITY _____ STATE _____
PHONE _____ ZIP/POSTAL CODE _____
PURCHASED FROM _____
ADDRESS _____
PURCHASE DATE _____ MODEL NO. _____ SERIAL NO. _____

PLEASE TAKE A MOMENT TO HELP US MAINTAIN THE HIGHEST POSSIBLE PRODUCT STANDARDS.
PLEASE COMMENT ON HOW THE PRODUCT WAS RECEIVED, INSTALLED AND ANYTHING ELSE YOU
THINK WE COULD DO TO IMPROVE OUR PRODUCTS FOR YOU. THANK YOU.



WARRANTY

Stan Design Inc. Warrants to the original owner that Models J6000H, J7500H, J7000L, J9000H, J12000H, J15000H, J18000H, J25000H, J35000H, J50000H series bridge jacks will be free from defects in workmanship for a period of 5 years from invoice date under normal use and conditions provided the product is installed and/or used according to our specifications. Damage or failure of any part due to electrolysis, corrosion, or faulty maintenance is not covered by this warranty. This warranty excludes the following: air valve and assemblies, lifting accessories, roller bearings, hydraulic ram, pump and assemblies, wheel assemblies and lock assemblies. The preceding items carry a 6 Month warranty from date of invoice.

The original owner is responsible for any transportation charges incurred in getting the defective items to an authorized distributor or repair depot. If the items returned are found to be defective by Stan Design Inc. Stan Design Inc. will pay for the reasonable freight costs to return the repaired items to the original owner for the first (12) twelve months only. The purchaser will bear the costs of transportation after the first twelve months and for the remainder of the warranty.

The warranty is a parts and on-site labour warranty for the first twelve months only. After the first twelve months a parts only warranty applies to the original purchaser only and is in no way transferable. To make a claim under this warranty please contact your equipment distributor or an authorized warranty depot. Original proof of purchase in the form of an invoice or sale receipt must be supplied with any request for warranty repair.

THE WARRANTIES CONTAINED HEREIN ARE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND STAN DESIGN INC. NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR STAN ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THE PRODUCTS WHICH IS NOT CONTAINED IN THIS AGREEMENT OR IMPOSED BY LAW. THE WARRANTIES CONTAINED HEREIN SHALL NOT APPLY TO ANY PRODUCT THAT HAS BEEN THE SUBJECT OF ACCIDENT, NEGLIGENCE, ALTERATION, ABUSE OR MISUSE. THE REPAIR OR REPLACEMENT OF DEFECTIVE PRODUCTS AS PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE REMEDY AVAILABLE TO THE OWNER. EXCEPT AS OTHERWISE EXPRESSLY PROVIDED HERIN, IN NO CASE SHALL STAN BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND WHATSOEVER EXCEPT WHERE SUCH PROHIBITION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS PROHIBITED BY LAW. STAN MAKES NO WARRANTY WITH RESPECT TO ACCESSORIES OR PARTS NOT SUPPLIED BY STAN DESIGN INC.

Postage Here

**Stan Design Inc.
264 Bloor St. W.
Suite 22576
Toronto, Ontario, Canada
M5S 3C5**