

Low Oil Monitor

Do you wait for your oil light to glow on the dash of your automobile before you add or change oil? Did you promise yourself that you would check your air compressor's oil level every month? The low oil monitor automatically "shuts down" your air compressor in the event that the oil in the compressor pump falls below a safe level.

Key word: **AUTOMATICALLY!**

