

# Remove Existing Pigtail From Lift (Do Not Operate Until Completed)

## 1.) Incoming Power (Factory Installed)

- One hot to **terminal 6**
- One hot to **terminal 2**
- Ground to ground

## 2.) Motor (Factory Installed)

- One hot to **terminal 8**
- One hot to **terminal 4**

## 3.) Limit Switch

- Cut ground off,  
**DON'T USE!**
- One hot to **Up Button terminal 4**
- One hot to **terminal 1**

## 4.) Jumpers (Factory Installed)

- Jumper from **Up Button terminal 3** to **terminal 6**
- Jumper from **terminal 2** to **terminal 0**

