

Operator's Manual

10437



Forklift Jack



15270 Flight Path Drive • Brooksville, FL 34604
Phone (352) 754-1117 • Toll Free (800) 352-9852 • Fax (352) 754-4508
www.esco.net • sales@esco.net



WARNING

1. Use extreme caution when lifting narrow fork lift trucks (less than 1016mm Wide) from the sides.
2. Never use more than one jack to lift the fork lift truck.
3. Do not use the **10437** to raise all for 4 wheels of the fork lift from the floor. Two wheels of the lift truck must remain in contact with the floor at all times.
4. Do not push the jack under the fork lift beyond the red line marked on the decal on the top of the lift arm.
5. Do not use any kind of “cribbing” under the **10437** or on top of the lift pad area.
6. Keep hands, feet and all other body parts out of the area of the scissors mechanism at all times.
7. Do not drop, throw, drive over or otherwise abuse the **10437**.
8. Do not drive the lift truck off the jack or attempt to move the fork lift at any time when it is supported by the .
9. Do not work on the fork lift, or get under it for any reason until it is properly supported by means of adequate stands.
10. The **10437** jack is designed solely for the lifting of fork lift trucks.
11. Do not modify the **10437** jack by yourself.
12. Do not exceed the rated capacity of the **10437** ,which is 7000kg.

SPECIFICATIONS

Rated capacity	7000kg/15400lbs
Starting pad height (notch)	65mm/2-1/2inches
Max.raised height	420mm/16-1/2inches
Width	250mm/9-4/5inches
Weight	48kg/105.6lbs
Chassis Length	730mm/28.7 inches

NO	DESCRIPTION	QTY	NO	DESCRIPTION	QTY
01	Grip	1	35	Seal Ring	1
02	Handle 1	1	36	Screw	1
03	Screw	2	37	Seal Ring	1
04	Handle 2	1	38	Spring	1
05	Handle Base	1	39	Magnet Steel	1
06	Chain	1	40	Valve Block	1
07	Chain Hook	1	41	O-Ring	2
08	O-Ring	2	42	Back-Up Ring	1
09	Retaining Ring	10	43	Ball	1
10	Pin	3	44	Ball Seat	1
11	Screw	2	45	Spring	1
12	Seal Ring	2	46	Screw	1
13	Oil Tank	1	47	Piston Rod Pad	1
17	O-Ring	2	48	Pin	1
18	Port Ring	1	49	Saddle	1
19	Cylinder	1	50	Pin	1
20	Piston Rod	1	51	Spacer	2
21	Piston	1	52	Screw	2
22	Valve Seat	1	53	Lock Washer	2
23	Ball	3	54	Nut	2
24	O-Ring	1	55	Snap Ring	2
25	Release Rod	1	56	Washer	2
26	Release Knob	1	57	Wheel	2
27	Screw	1	58	Frame 2	1
28	Link Rod	1	59	Screw	2
29	Pin	1	60	Lock Washer	4
30	Plunger	1	61	Washer	2
31	Wiper	1	62	Axle	1
32	Back-Up Ring	1	63	Screw	2
33	O-Ring	1	64	Trunnion	2
34	Pump	1	65	Frame 1	1

