

# LIQUID TRUCK TIRE BALANCE INSTALLATION GUIDE:

## STEP 1



Remove Valve Core to Release Air From Tire Completely.

## STEP 2



Remove Weights or All Other Balancing Compounds.

## STEP 3



Cut the Cap at the Line on the Cap.

## STEP 4



Install the Application Hose onto Cap.

## STEP 5



Connect Hose to Valve Stem and Squeeze Bottle to Fill.

## DEMOUNTED APPLICATION



Liquid Tire Balance Can Also Be Installed While the Tire is Demounted.