


VacFill³ Basic Operational Overview

IMPORTANT: Machine needs at least 115psi of air to operate.

SUCTION WAND PROCEDURE:


1. Connect Wand Adapter to service line & open Ball Valve.
2. Turn Overflow Valve on back of machine to "Normal Service Position".

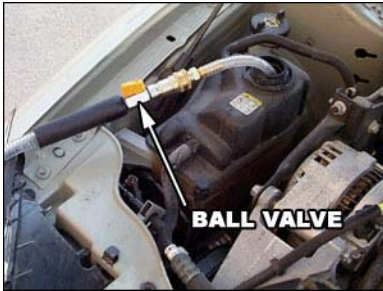

3. Turn Right Dial to "Vacuum/Drain Waste" position.
4. Turn Left Dial to "Air On" position to start.
5. Turn Left Dial to "Air Off" position when finished.

REMOVE & FILL PROCEDURE:

1. Make sure vehicle is turned off, but at operating temperature.
2. Turn Overflow Valve on back of machine to "Normal Service Position".
3. Connect Wand Adapter to service hose, open Ball Valve, turn Left Dial to "Air On" position and Right Dial to "Vacuum/Drain Waste" position to remove waste fluid from overflow bottle.
4. When overflow bottle is empty, turn Left Dial to "Air Off" position.
5. Remove radiator cap.
6. Connect Cone Adapter to service line.

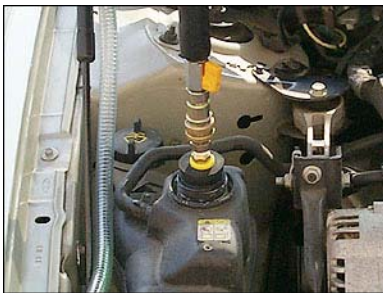

7. Turn Right Dial to "Vacuum/Drain Waste" position.
8. Turn Left Dial to "Air On" position.
9. Open Ball Valve on service hose.
10. Insert Cone Adapter into radiator, making sure the tip of the cone is submerged.
HINT: If servicing from bottle, insert a hose into the cone long enough to reach near the bottom of the bottle (hose not supplied).
11. Wait until no more waste fluid is being removed.

For technical support, call:

**Flo-Dynamics
1-800-303-5874**

12. Turn Right Dial to desired fluid type to fill the radiator making sure you don't break the vacuum seal between the rubber cone & the radiator.
13. Turn Left Dial to "Air Off" position after fluid is removed.
14. Wait until new fluid stops entering radiator & remove Cone Adapter.
15. Top off radiator if needed.
16. Refill overflow bottle & replace radiator cap.

DRAIN TANKS PROCEDURE:

DRAIN WASTE TANK

1. Turn Right Dial to "Vacuum/Drain Waste" position.
2. Attach Wand Adapter to service hose.
3. Turn Overflow Valve on back of machine to "Drain Waste Tank Position".
4. Open Ball Valve on service hose and place into waste container.
5. Turn Left Dial to "Air On" position to drain waste tank.
6. When finished draining, remove service hose from waste container, and close Ball Valve.
7. Turn Left Dial to "Air Off" position.
8. Turn Overflow Valve on back of machine to "Normal Service Position" to release air pressure from waste fluid tank.

NOTE: Coolant may splash out while air pressure is being released. Keep hands and face away from the overflow bottle.

For technical support, call:

**Flo-Dynamics
1-800-303-5874**