
# HONUAL Module Quick Start Gui

### **Knowledge of X-431 HD Module**

X-431 HD module works as a vehicle communication interface device, which is used read the vehicle data and then send it to the diagnostic tool via Bluetooth communication and USB connection. The LED indicators enable you to easily identify the working status of the module.

#### Technical parameters:

- · Working voltage: 9-36V
- Power consumption: ≤ 2W
- · Working temp.: -10°C-55°C
- · Communication via:
  - 1) USB cable
- 2) Bluetooth

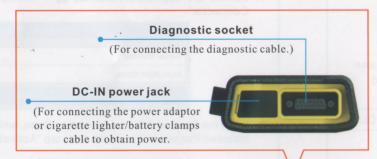

### LED Indicators

Displays the working status of the module. It is defined as follows:

- Wehicle: While the module is communicating with the vehicle, the indicator lights up and flashes. Otherwise, it will not illuminate.
- 2. (1) Power: It illuminates solid red when the module is powered on.
- 3. **Bluetooth**: Blue indicates the module is working in Bluetooth mode.
- 4. ◆ USB: It lights up when the module is connected to the diagnostic tool via USB cable.



Note: When the diagnostic cable or adaptor cable keeps unused, please remember to unplug it from the vehicle's DLC.

#### **USB** port

(For connecting it to the diagnostic tool to perform vehicle diagnosis.)



#### X-431 HD module Diagnostic cable USB cables (To connect the HD (To connect the HD (For accessing vehicle module and diagnostic module to the diagnostic live data) tool to perform vehicle tool with different type of diagnosis.) USB port.) Adaptor cable kit Cigarette lighter Battery clamps cable (For different vehicle (To supply power to the HD (To supply power to the HD diagnostic socket, it may module through connection module through connection be necessary to use one of to cigarette lighter

to vehicle's battery.)

Password envelope

(A piece of paper bearing

S/N and Activation Code, which is needed for your

registration.)

the adaptor cables included

within the kit.)

Accessory Checklist <<<

receptacle.)

Power adaptor

(To supply power to the HD


module through AC outlet.)



### 1 Connections

- 1. Locate the vehicle's DLC: The DLC (Data Link Connector) is typically a connector where diagnostic code readers interface with the vehicle's on-board computer. The DLC location varies from vehicle to vehicle. It is generally located in driver's cab. If no DLC is found, please refer to Automobile Repair Manual.
- 2. Switch the ignition on.
- 3. <u>For vehicles equipped with OBDII management system</u>, plug one end of the diagnostic cable into the vehicle's DLC, and the other end into the diagnostic socket of the HD module, and then tighten the captive screws.

<u>For vehicles not equipped with OBDII management system</u>, it is necessary to use the corresponding adaptor cable, and then follow one of the methods below to make connection:

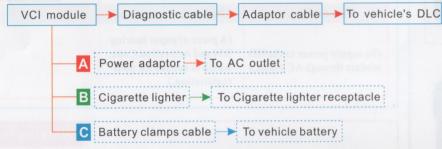

5. To perform vehicle diagnosis via USB cable, connect the B-shaped terminal of the USB cable to the HD module and other end to the USB port of the diagnostic tool.

Note: To obtain stable communication, you are strongly recommended to use this method.

### THANK YOU FOR CHOOSING LAUNCH!

If you have any questions or comments please forward them to:

LAUNCH Tech USA Product Support
Phone: 877-528-6294 xt: 4
Fax: 562-463-1590

1820 S. Milliken Ave. Ontario, CA 91761
Monday - Friday 5 am - 5 pm PST

Service & Repair
Phone: 877-528-6294 xt: 5
Monday - Friday 8 am - 5 pm PST
Please visit our public form @
http://launch.activeboard.com



### 2 Activate X-431 HD Module & Download Software


If you had a diagnostic tool of 12V car configuration and intend to experience the diagnosis of trucks, follow the steps described below to activate the module:

Note: Please make sure that the diagnostic tool is properly connected to the Internet before proceeding this step.

1. Launch the application, then tap = -> "Profile"/ "My Data" -> "Activate Connector".




2. Input the Product S/N and Activation Code, which can be obtained from the included Password Envelope, then tap "Activate" to activate the module.

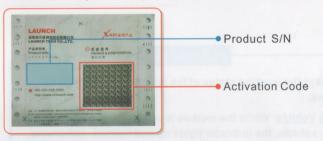

3. Tap "Update" to enter update center, tap "Update" to download and install it.

## 3 Start Diagnostics

Follow the sequence below to start a new diagnostic session.

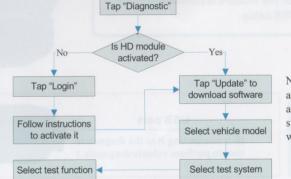

Note: Pictures illustrated herein are for reference purpose only and this Quick Start Guide is subject to change without prior written notice.