




Not recommended for system that cannot hold 5 inches of vacuum for 25 minutes or 15 inches of vacuum for 5 minutes.

CAUTION: Avoid contact with skin. Always use protective eyewear.

PRIMING THE INJECTION HOSE

1. Remove cap and seal from the 1/4oz. (7.5ml) primer cartridge.
2. Attach R-134a hose to cartridge then remove drip cap.
3. Pull the rod all the way back from the injection gun.
4. Install cartridge/hose assembly into injection gun then push the rod towards the cartridge.
5. Connect **LOW**-Side adapter to the quick-connect coupler.
6. Squeeze trigger repeatedly until cartridge is empty.

The injection hose is primed and ready for use.

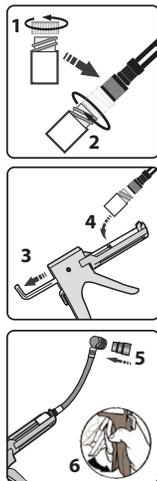


Not recommended for system that cannot hold 5 inches of vacuum for 25 minutes or 15 inches of vacuum for 5 minutes.

CAUTION: Avoid contact with skin. Always use protective eyewear.

PRIMING THE INJECTION HOSE

1. Remove cap and seal from the 1/4oz. (7.5ml) primer cartridge.
2. Attach R-134a hose to cartridge then remove drip cap.
3. Pull the rod all the way back from the injection gun.
4. Install cartridge/hose assembly into injection gun then push the rod towards the cartridge.
5. Connect **LOW**-Side adapter to the quick-connect coupler.
6. Squeeze trigger repeatedly until cartridge is empty.


The injection hose is primed and ready for use.

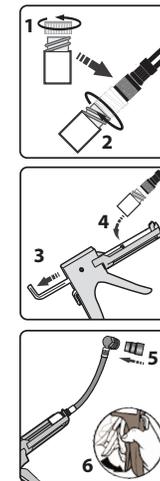

INSTRUCTIONS

We recommend to use one cartridge for leaks less than 25oz. (700 g) per year. Use 2 cartridges for larger leaks.

1. Remove cap and seal from the 1oz. (30ml) Leak Guard cartridge. Attach R-134a hose to the top of cartridge. (Fig.1)
2. Pull the rod all the way back from injection gun then install cartridge/hose assembly into injection gun. (Fig.2)
3. Squeeze trigger repeatedly until piston rests against the Leak Guard cartridge. (Fig.3)
4. Connect injection gun system to the **LOW** side port of the vehicle's A/C system. (Fig.4)
5. Empty the entire Leak Guard cartridge into the A/C system by squeezing the trigger.
6. Disconnect injection gun system from the vehicle then attach drip cap to the coupler.
7. Start engine and turn vehicle's A/C to maximum cooling. Allow A/C system to run for 15 minutes to circulate Leak Guard to seal all leaks.

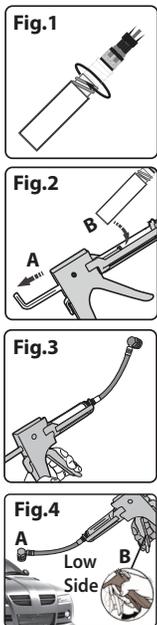


#98085165 Rev.0-1

INSTRUCTIONS

We recommend to use one cartridge for leaks less than 25oz. (700 g) per year. Use 2 cartridges for larger leaks.

1. Remove cap and seal from the 1oz. (30ml) Leak Guard cartridge. Attach R-134a hose to the top of cartridge. (Fig.1)
2. Pull the rod all the way back from injection gun then install cartridge/hose assembly into injection gun. (Fig.2)
3. Squeeze trigger repeatedly until piston rests against the Leak Guard cartridge. (Fig.3)
4. Connect injection gun system to the **LOW** side port of the vehicle's A/C system. (Fig.4)
5. Empty the entire Leak Guard cartridge into the A/C system by squeezing the trigger.
6. Disconnect injection gun system from the vehicle then attach drip cap to the coupler.
7. Start engine and turn vehicle's A/C to maximum cooling. Allow A/C system to run for 15 minutes to circulate Leak Guard to seal all leaks.

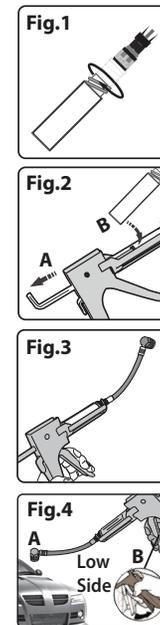

#98085165 Rev.0-1