


Thank you for purchasing the IWA500 Intelligent Wheel Alignment System. This Quick Reference Guide instructs you on how to assemble and disassemble the equipment. Please read this guide carefully before use.


Assembling the Intelligent Wheel Alignment System

1

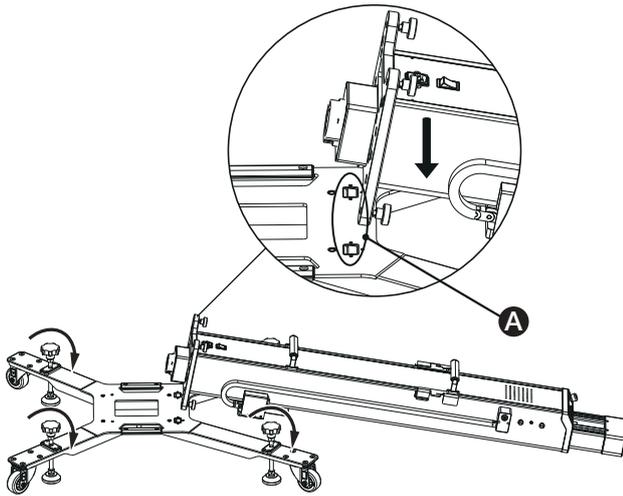


Rotate the adjustable feet clockwise to keep the base in a fixed position. Place the stand onto the designated position (A) on the base.

2

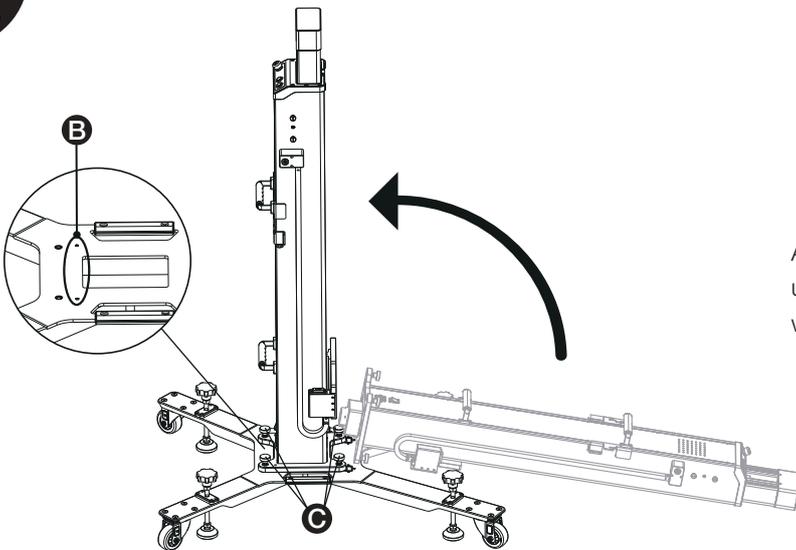


Align the two positioning pins (B) to raise the stand until it is fully upright. Rotate the four knobs (C) clockwise to secure the stand.

3

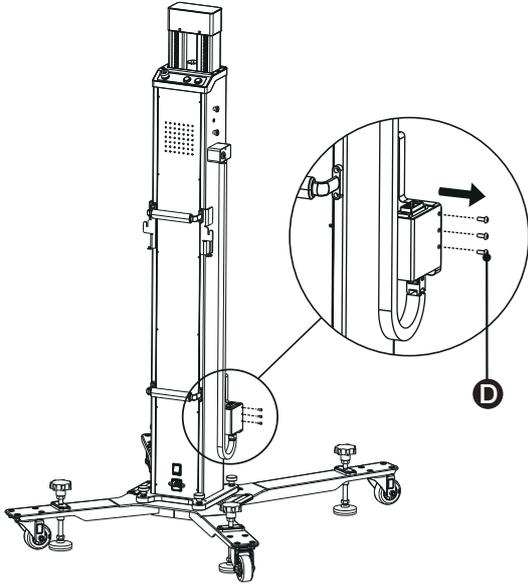


Unscrew the screws (M4 x 10) (D) using the hex L-wrench (2.5 mm) to detach the power connector.

4

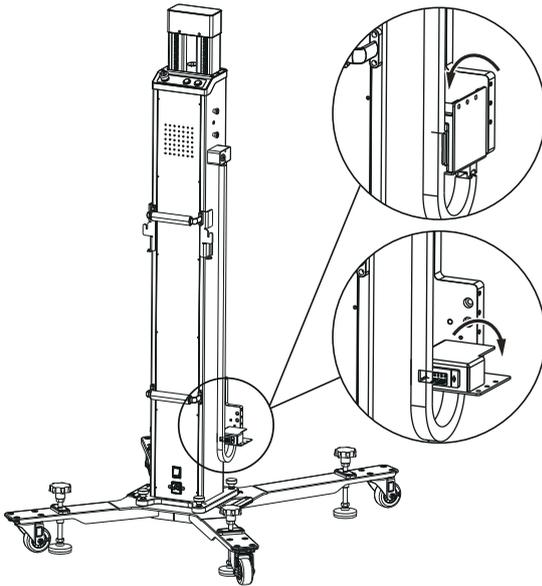


Flip the power connector outward first, and then turn it sideways to expose the two screw holes on the stand.

5

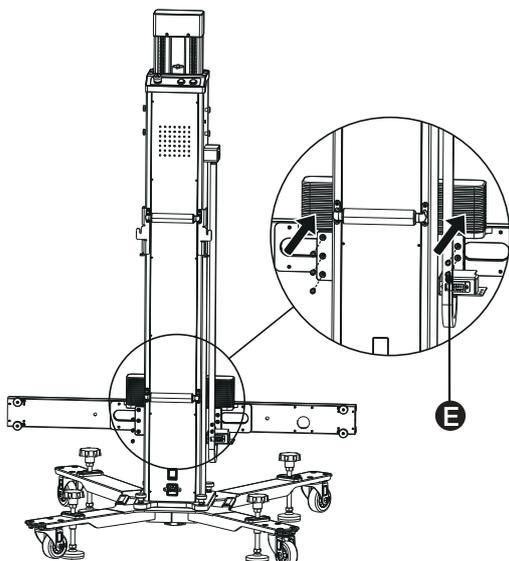


Align the five screw holes on the arm connector with those on the stand. Insert and tighten the screws (M5 x 20) (E) using the hex L-wrench (4 mm).

6

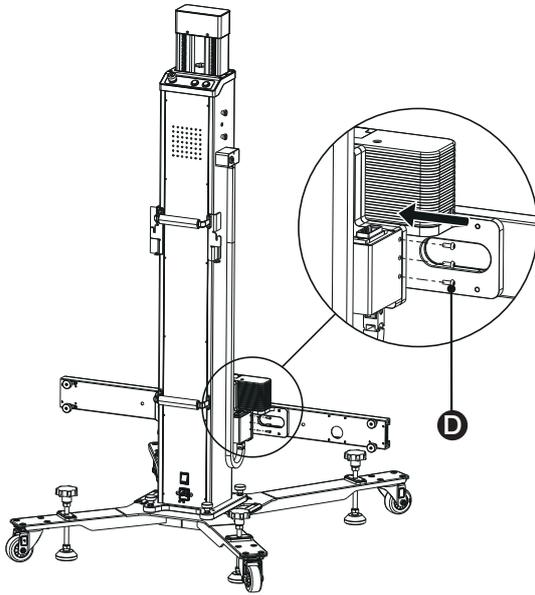


Insert and tighten the screws (M4 x 10) (D) using the hex L-wrench (2.5 mm) to secure the power connector onto the stand.

7

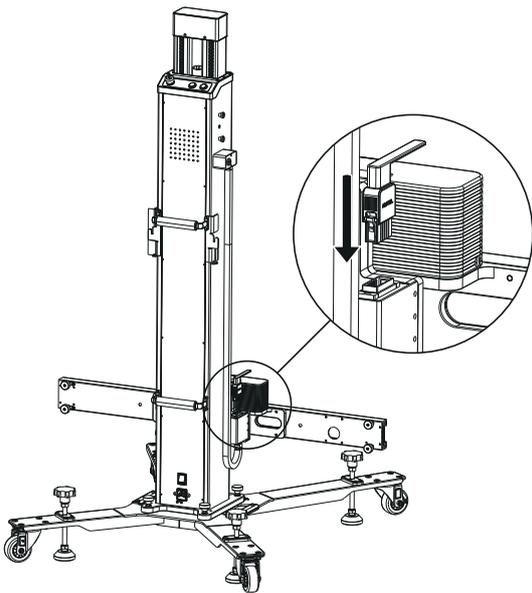


Plug the adapter into the power connector.

8

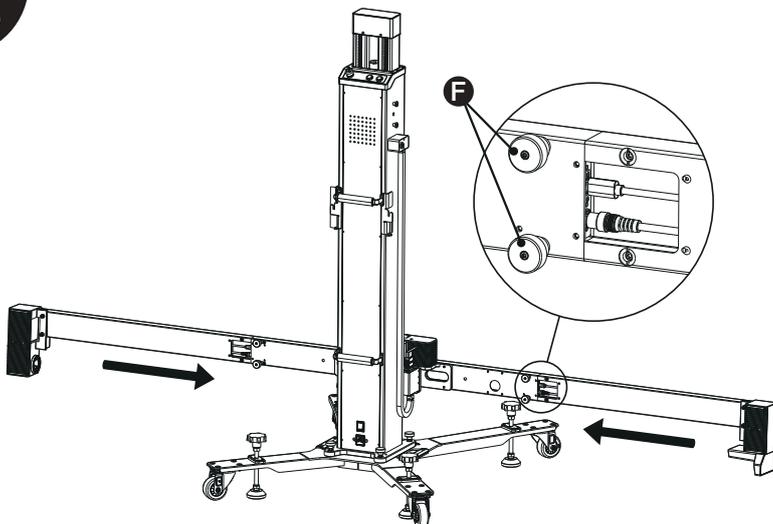


Assemble the left and right arms. Tighten the four fastening knobs (F) after the crossbar is firmly connected. Plug the power cables and USB cables.

9

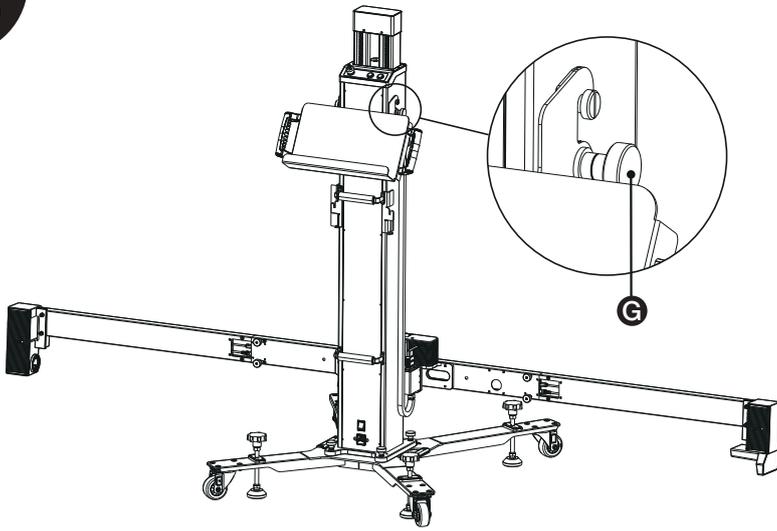

Install the tablet holder on the stand. Rotate its two knobs (G) clockwise to secure it.

Powering up the Intelligent Wheel Alignment System

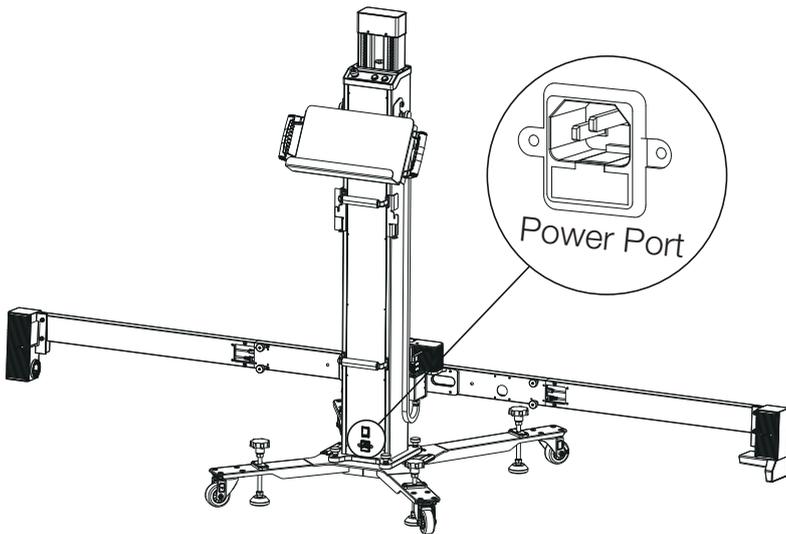


Plug the power cord into the port at the bottom of the stand and into a power socket. Turn on the power switch. The power switch will light up red, and the cameras will flash red in a circle.



NOTE: System power requirements: 100–264 volts AC, < 5 amps, and 50/60 Hz (must be grounded).


Covering the Intelligent Wheel Alignment System

1

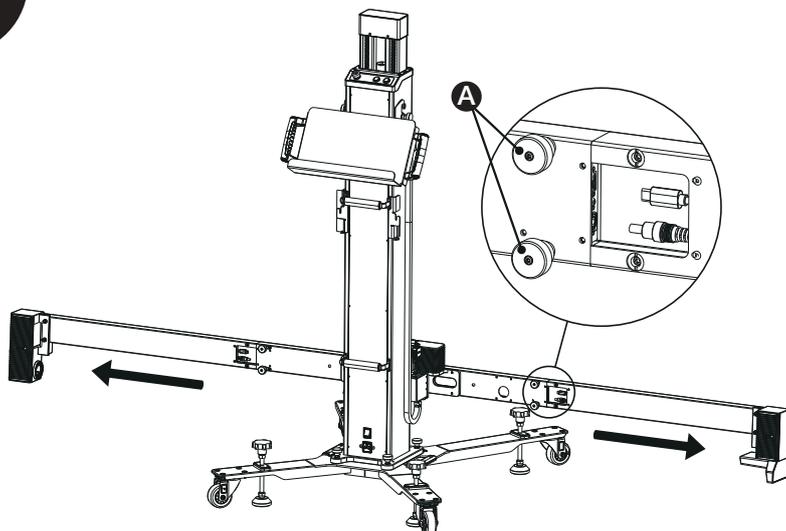


Lower the crossbar completely and power off the wheel alignment system. Unplug the power cables and USB cables. Loosen the four fastening knobs (A) to disassemble the left and right arms.

2

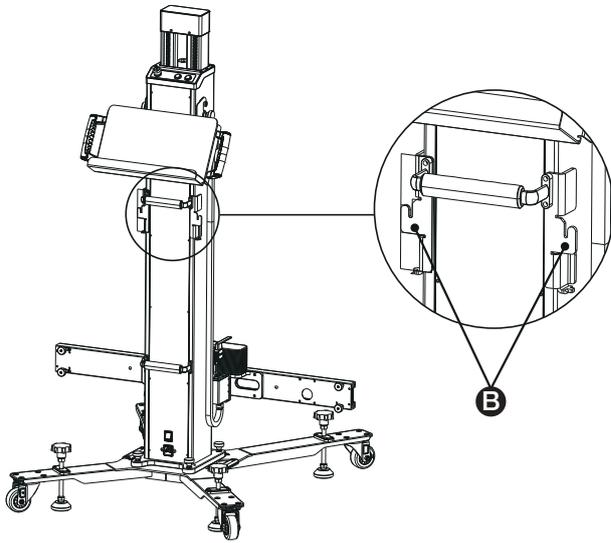


Locate the two hangers (B) on either side of the stand.

3

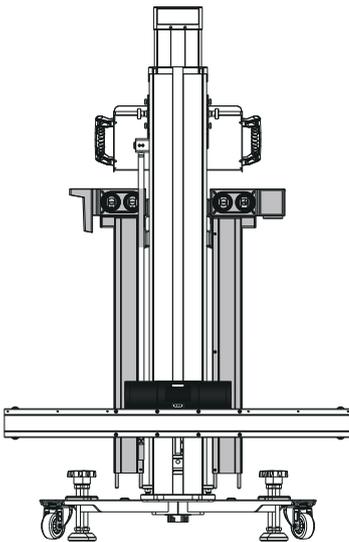

Hang the left and right arms on their respective hangers.


4

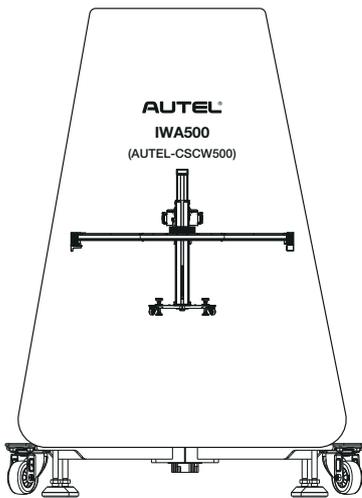

Cover the wheel alignment system with the provided equipment cover to prevent dust accumulation.


Disassembling the Intelligent Wheel Alignment System

1

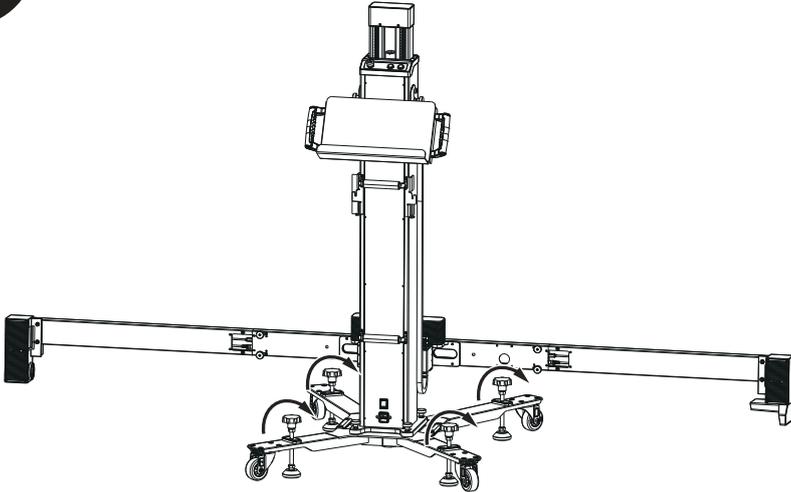


Lower the crossbar completely and power off the wheel alignment system. Rotate the adjustable feet clockwise to keep the base in a fixed position.

2

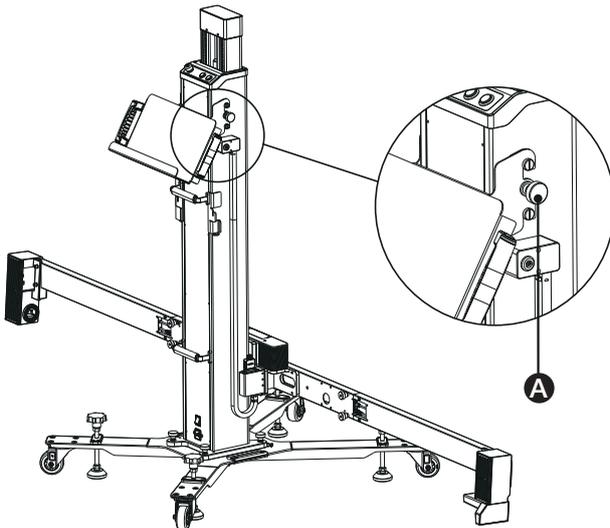


Loosen the two knobs (A) to remove the tablet holder.

3

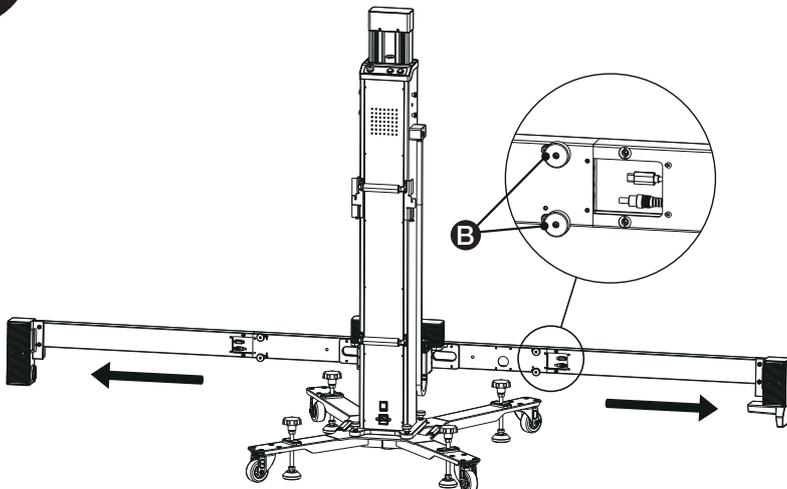


Unplug the power cables and USB cables. Loosen the four fastening knobs (B) to disassemble the left and right arms.

4

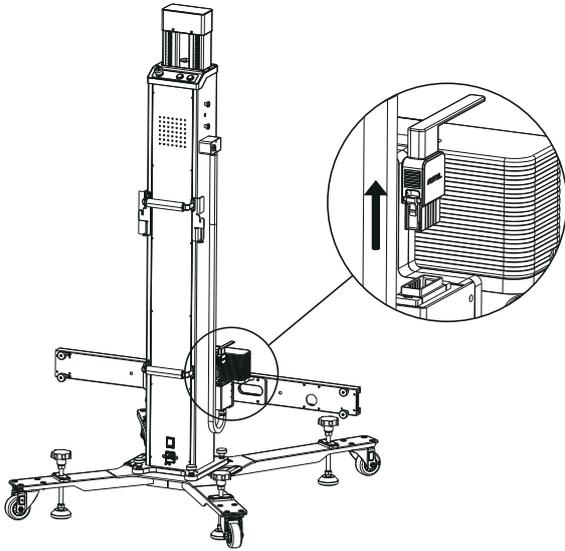


Unplug the adapter from the power connector.

5

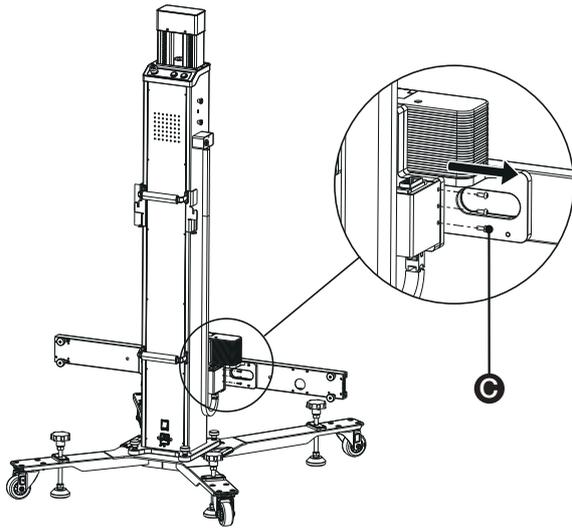


Unscrew the screws (M4 x 10) (C) using the hex L-wrench (2.5 mm) to detach the power connector.

6

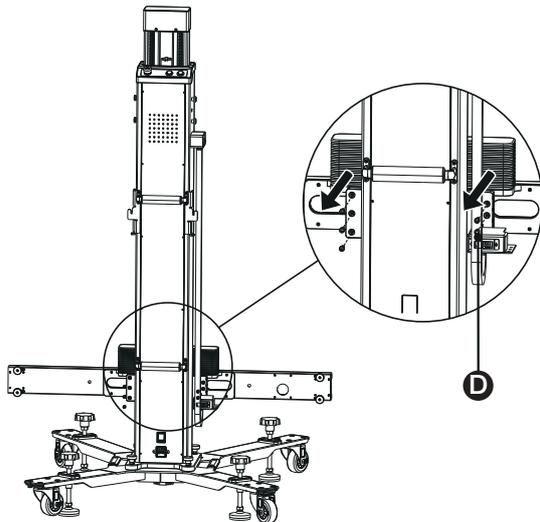


Unscrew the five screws (M5 x 20) (D) using the hex L-wrench (4 mm) to remove the arm connector from the stand.

7

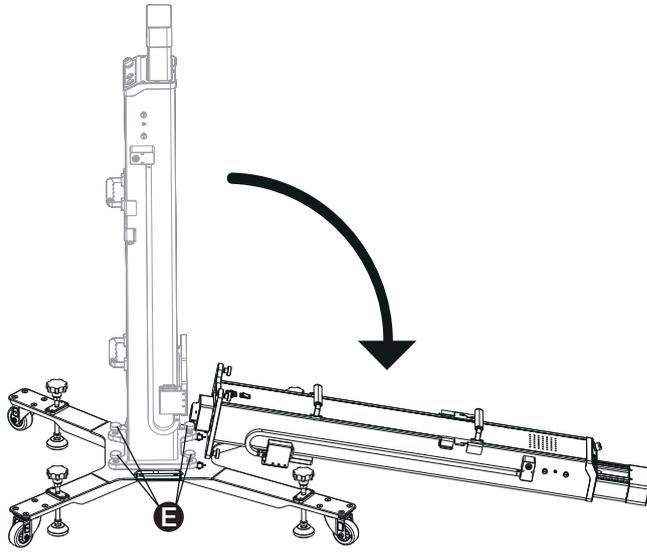

Loosen the four knobs (E) to lay the stand down.

8

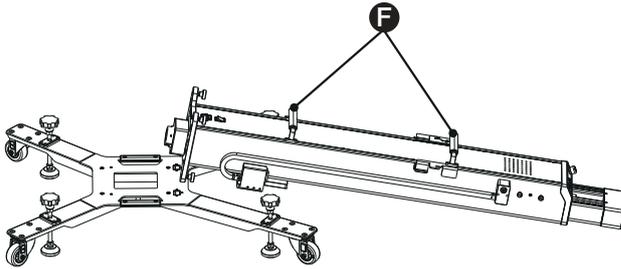

Lift the handles (F) to detach the stand from the base.

NOTE: The illustrations in this Quick Reference Guide are for reference only. The actual product may differ.