


Installation, Operating and Service Manual

NW10KC-E

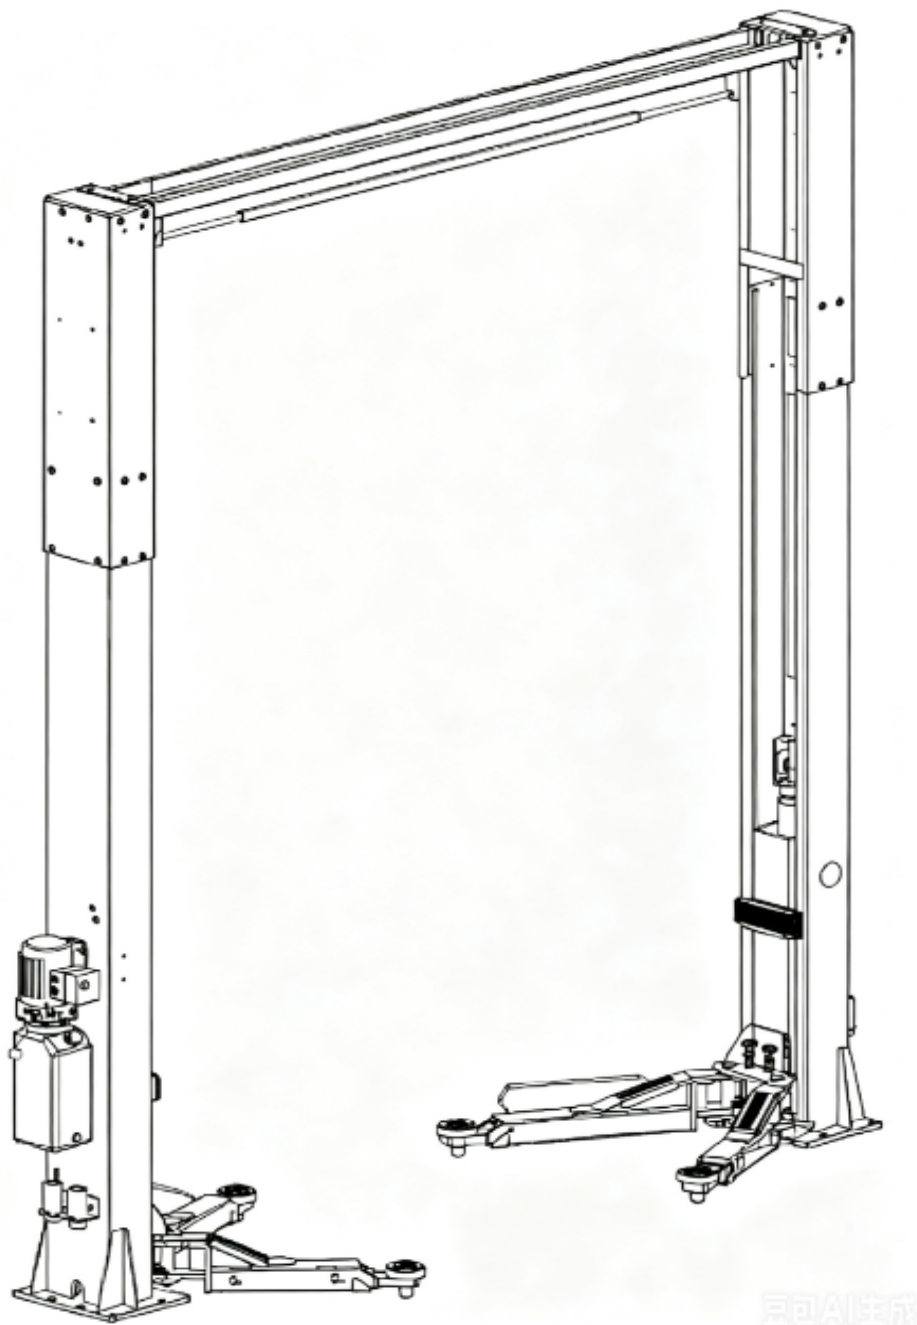

PRINTING CHARACTERS AND SYMBOLS

Throughout this manual, the following symbols and printing characters are used to facilitate reading:

	Indicates the operations which need proper care
	Indicates prohibition
	Indicates a possibility of danger for the operators
	Indicates the direction of access for motor vehicles to the lift



WARNING: before operating the lift and carrying out any adjustment, read carefully chapter 4 “Installation” where all proper operations for a better functioning of the lift are described..

INDEX

GENERAL INFORMATION.....	5
1 – TECHNICAL DATA.....	7
1.1 LIFT DESCRIPTION.....	8
1.2 LAYOUT STANDARD.....	9
1.3 LOAD DISTRIBUTION.....	10
1.4 PICTOGRAMS.....	11
1.5 HAZARDOUS AREA.....	12
2 - FOREWORD.....	13
3 - GENERAL SAFETY AND ACCIDENT-PREVENTION RULES.....	13
3.1 NOTES ON LIFT INSTALLATION.....	15
3.2 ENVIRONMENT AND POLLUTION.....	15
3.3 LIFT SCRAPPING.....	15
3.4 DANGER LEVELS.....	15
3.5 HAZARDOUS AREAS.....	16
3.6 LIFT SAFETY LABEL.....	16
3.7 INTENDED USE.....	16
4 – TRANSPORT AND INSTALLATION.....	17
4.1 UNPACKING.....	17
4.2 INSTALLATION AREA.....	19
4.3 INSTALLATION.....	19
4.4 CONNECTING TO THE ELECTRICITY MAINS.....	21
4.5 HYDRAULIC CONNECTION.....	22
4.6 CONNECTION CABLES OF SYNC.....	23
4.7 ARM LOCK TEETH ADJUSTMENT	24
4.8 CHECK THE MOTOR ROTATION DIRECTION	24
4.9 BLEEDING THE HYDRAULIC SYSTEM	24
5 –INSTRUCTIONS FOR USE.....	24
5.1 START UP.....	24
5.2 UTILIZATION.....	25
5.3 EMERGENCY PROCEDURES.....	26
6- MAINTENANCE.....	26
7- PROBLEM SOLUTION.....	28
8- DIAGRAMS.....	29
8.1 ELECTRICAL SCHEMATIC DIAGRAM 220V-1PH.....	29
8.2 HYDRAULIC CONNECTION DIAGRAM.....	29
8.3 HYDRAULIC DIAGRAM.....	30

BEFORE STARTING TO OPERATE THE LIFT READ CAREFULLY THE INSTRUCTIONS CONTAINED IN THIS MANUAL

WARRANTY

The manufacturer warrants lifts and the relevant accessories for 12 months after purchase date. This warranty consists in the repair or replacement - free of charge - of those parts that, after a careful analysis by the Manufacturer's Technical Service, turn out to be faulty from origin. All electrical parts are excluded. Warranty is limited to material defects, and becomes null and void if the returned parts are tampered with or disassembled by unauthorized staff. Any liability for direct and indirect injuries to people, animals or property due to machine failure or malfunction are excluded from warranty. The expenses deriving from lubricants replacement, transport charges, and any customs duty, VAT and any other expense not specified in the supply contract are at the purchaser's charge. The replacement and repair of parts under warranty.

DISCLAIMER

Upon delivery, please check that the product has not been damaged during transportation, and that the accessories coming with it are intact and complete. any complaint shall be filed within 8 days after lift delivery date. Besides the cases envisaged by the supply contract, the warranty becomes null and void:

- In case of a maneuver error caused by the operator.
- If the damage is caused by poor maintenance.
- If the envisaged capacity is exceeded.
- If the machine has been somehow modified, and the damage has been caused by such a modification, due to

repair operations by the user without the authorization of the manufacturer or after fitting non-original spare parts.

- If the instructions described in the user's manual are not complied with.

GENERAL INFORMATION

This chapter contains warning instructions to properly operate the lift and prevent injury to operators or property. This manual has been written to be used by workshop technicians in charge of the lift (OPERATOR) and routine maintenance technician (MAINTENANCE OPERATOR). The operating instructions are considered to be an integral part of the machine and must remain with it for its whole useful life. Read every section of this manual carefully before operating the lift and unpacking, since it gives helpful information about:

- **SAFETY OF PEOPLE**
- **SAFETY OF THE LIFT**
- **SAFETY OF LIFTED VEHICLES**

The company is not liable for possible problems, damage, accidents, etc. resulting from failure to follow the instructions contained in this manual.

Only skilled technicians of AUTHORIZED DEALERS or SERVICE CENTRES AUTHORIZED by the manufacturer shall be allowed to carry out lifting, transport, assembling, installation, adjustment, calibration, settings, extraordinary maintenance, repairs, overhauling and dismantling of the lift.

The manufacturer is not responsible for possible damage to people, vehicles or objects if said operations are carried out by unauthorized personnel or if the lift is improperly used.

Any use of the machine made by operators who are not familiar with the instructions and procedures contained herein shall be forbidden.

MANUAL KEEPING

For a proper use of this manual, the following is recommended:

- Keep the manual near the lift, in an easily accessible place.
- Keep the manual in an area protected from damp.
- Use this manual properly without damaging it.
- Do not make any changes to this manual; any modifications and updates shall be made by the supplying company only.

This manual is an integral part of the lift: it shall be given to the new owner if and when the lift is resold.

OBLIGATIONS IN CASE OF MALFUNCTION



In case of machine malfunction, follow the instructions contained in the following chapters.

CAUTIONS FOR THE SAFETY OF THE OPERATORS

Operators must not be under the influence of sedatives, drugs or alcohol when operating the machine.



Before operating the lift, operators must be familiar with the position and function of all controls, as well as with the machine features shown in chapter “Operation and use”.

WARNINGS

Unauthorized changes and/or modifications to the machine relieve the manufacturer from any liability for possible damage to objects or people. Do not remove or make inoperative the safety devices, this would cause a violation of law and regulations on safety at work.



Any other use which differs from that provided for by the manufacturer of the machine is strictly forbidden.

The use of non-original parts may cause damage to people or objects.

DECLARATION OF WARRANTY AND LIMITATION OF LIABILITY

The manufacturer has paid proper attention to the preparation of this manual. However, nothing contained herein modifies or alters, in any way, the terms and conditions of the manufacturer agreement by which this lift was purchased, nor increases, in any way, manufacturer's liability towards the customer.

TO THE READER

Every effort has been made to ensure that the information contained in this manual is correct, complete and updated. The manufacturer is not liable for any mistakes made when drawing up this manual and reserves the right to make any changes required due to the development of the product, at any time.

1 – TECHNICAL DATA

Max. capacity	Lbs	10000	
Lifting time when loaded	s	45	
Lowering time when loaded	s	45	
Minimum height	Inch	4.13"	
Lifting height	Inch	74.8"	
Distance between the columns	Inch	112.2"	
Total height of lift	Inch	141.57"	
Single-phase electric motor	Volt-Hz-Amp	220V /60Hz/1Ph/20A	
Single-phase motor power	HP/KW	3/2.2	
Max. operating hydraulic pressure	Psi	3046	
Total weight of lift	Lbs	1367	
Package size (for shipment)	Inch	112.2"x17.7"x27.55"; 31.5"x11"x12.2"	
Recommended hydraulic oil	Type	ISO VG32	
Hydraulic system oil quantity	Gal/Qt	2.4 US gal/9.6 qt	
Fixing to the floor with screw anchors	N°10	3/4"x6-1/4" Wedge Anchors	
Average sound level at the operator's workstation LpA	dB(A)	72	




The lifting machine is equipped with 220v-1ph-60hz power supply. Different power supplies can be provided according to user requirements.


1.1 LIFT DESCRIPTION

NW10KC-E


- | | |
|------------------------------|--------------------------|
| 1. P1 Column | 9. Motor |
| 2. P2 Column | 10. Oil cylinder |
| 3. P1 Carriage | 11. chain |
| 4. P2 Carriage | 12. cable |
| 5. Cover | 13. Hydraulic power unit |
| 6. 2 Stage long lifting arm | 14. height limit switch |
| 7. 2 Stage short lifting arm | |
| 8. Connecting crossbeam | |

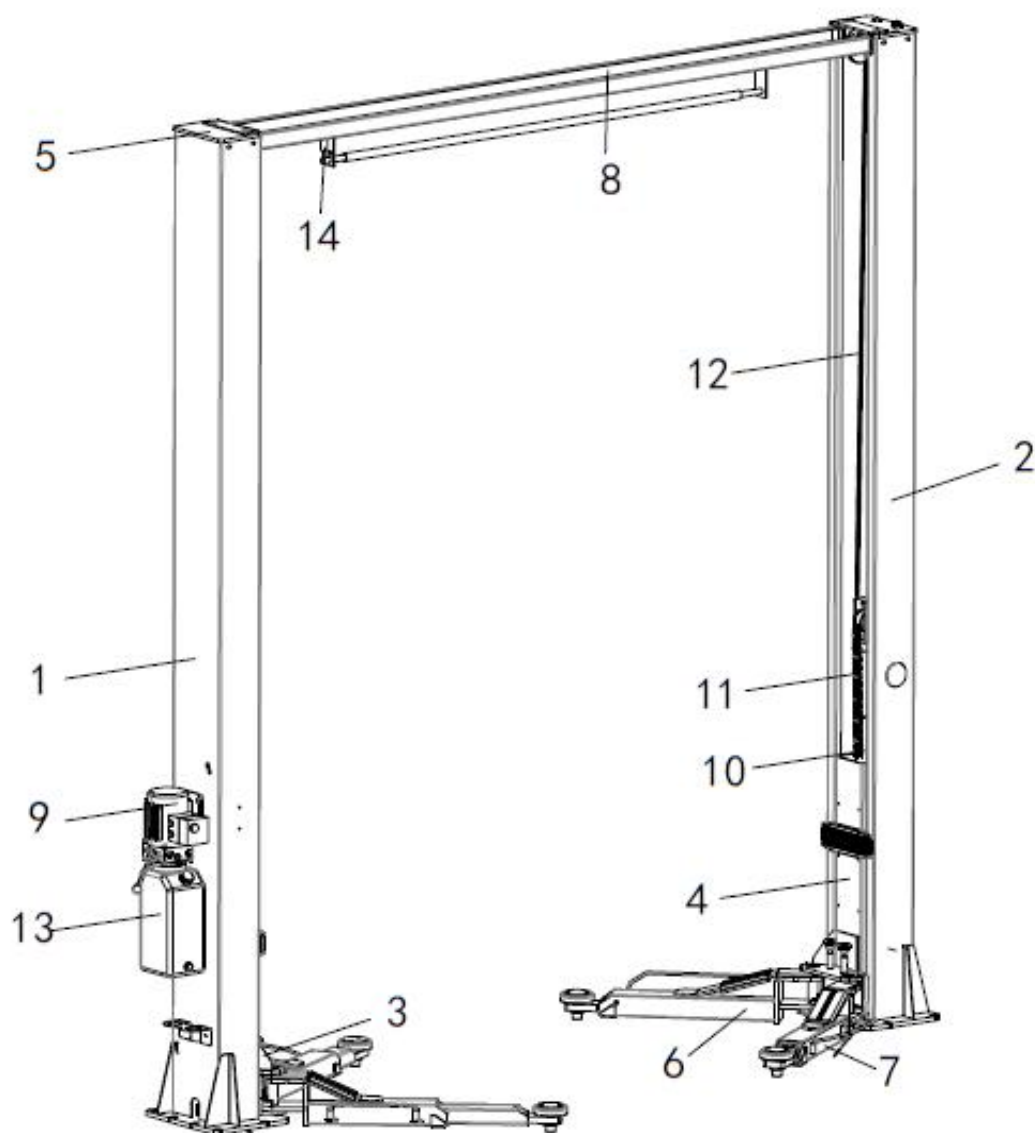



1.2 LAYOUT STANDARD

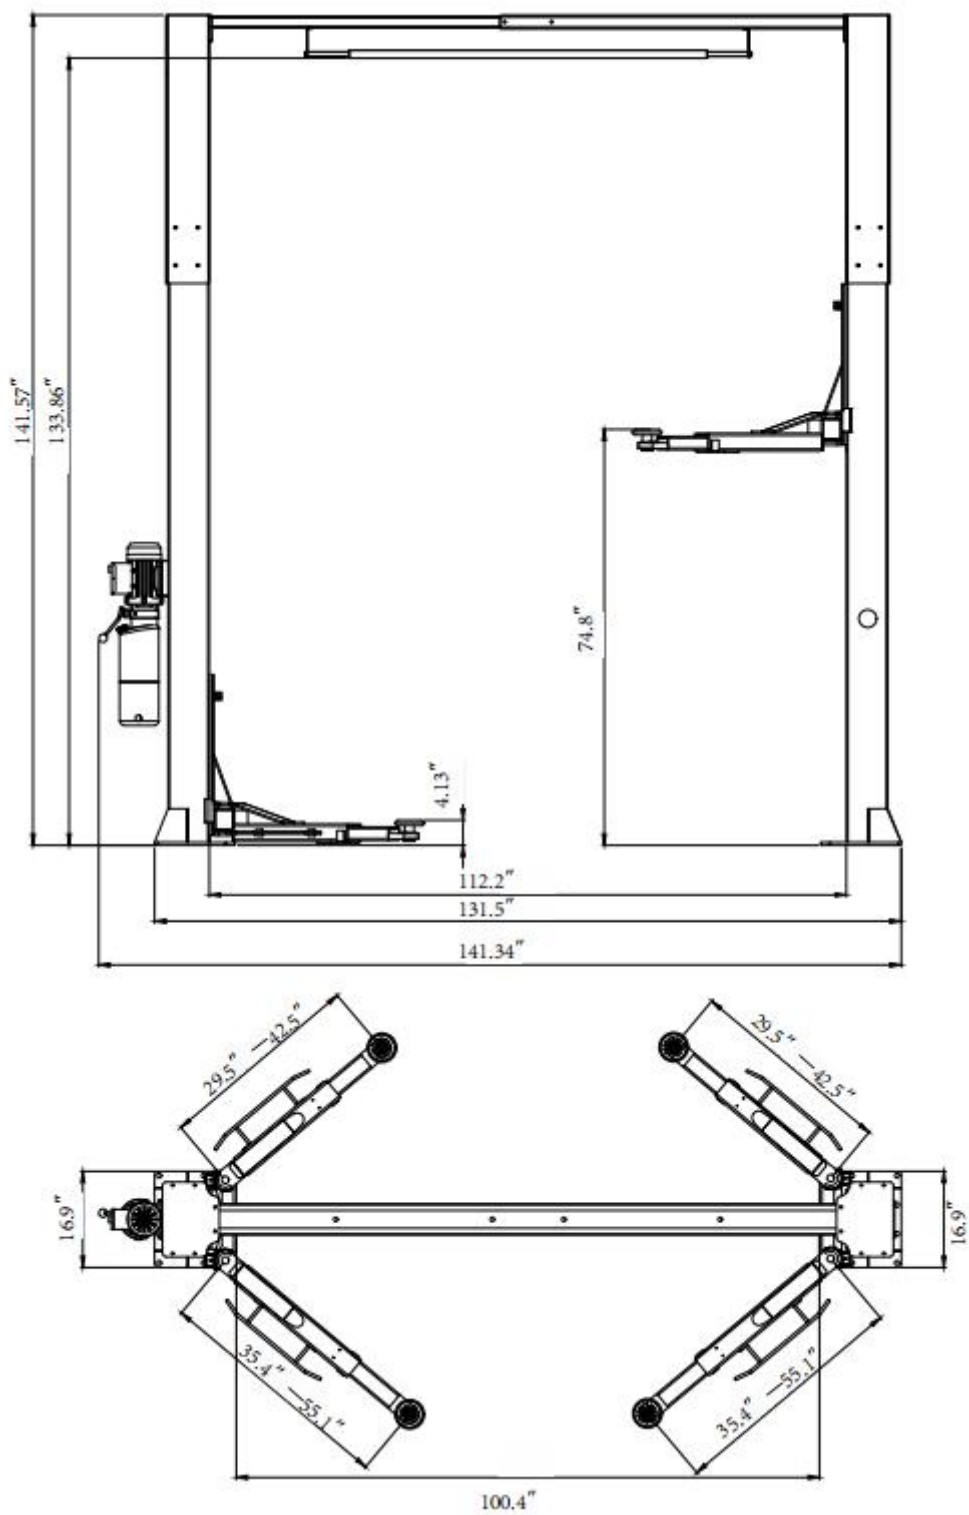


1.3 LOAD DISTRIBUTION DIAGRAM

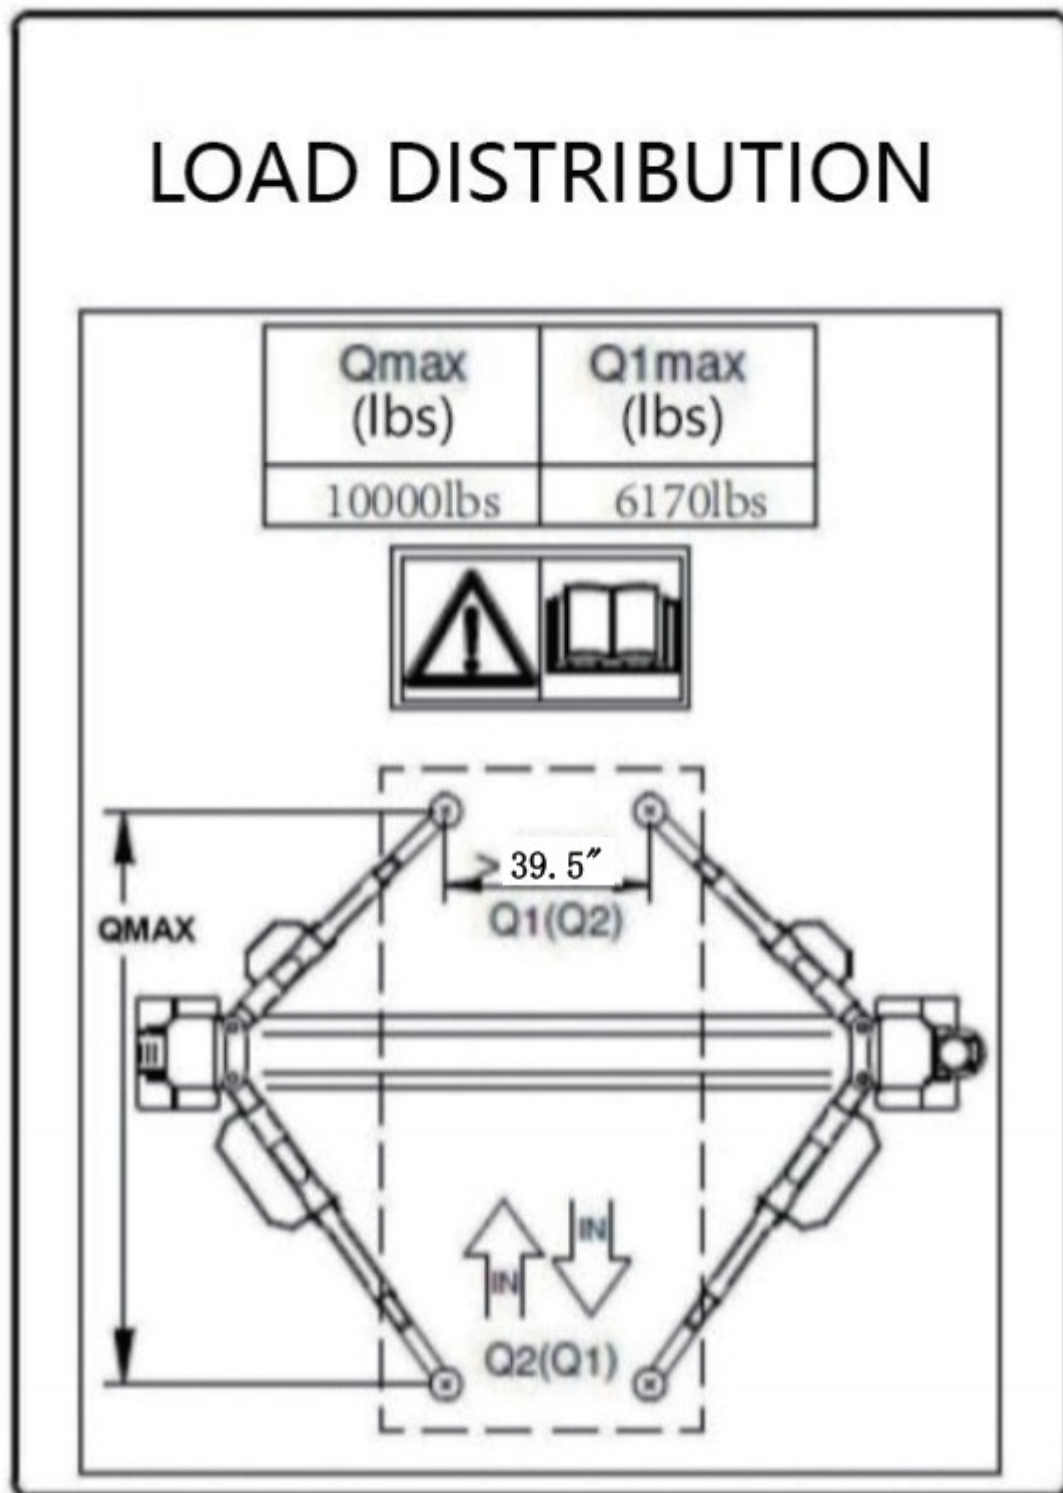

1.4 PICTOGRAMS

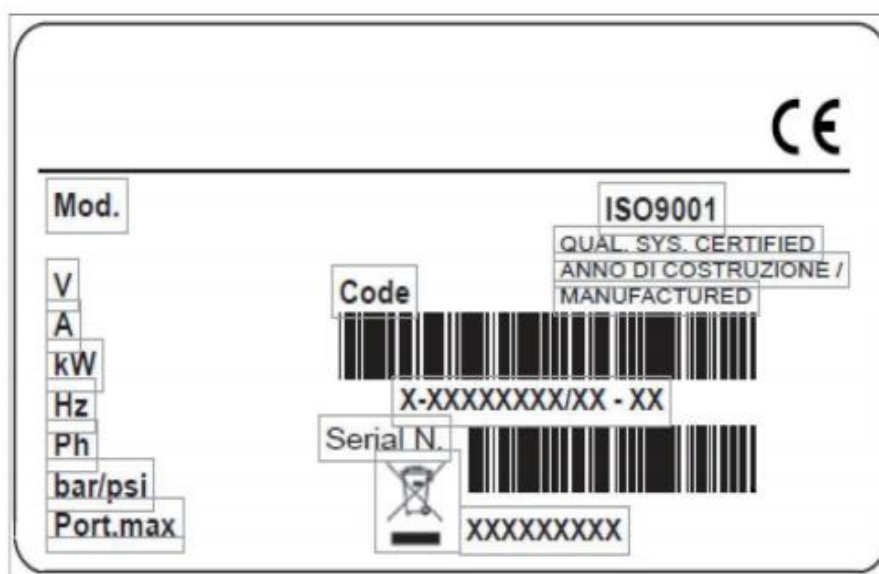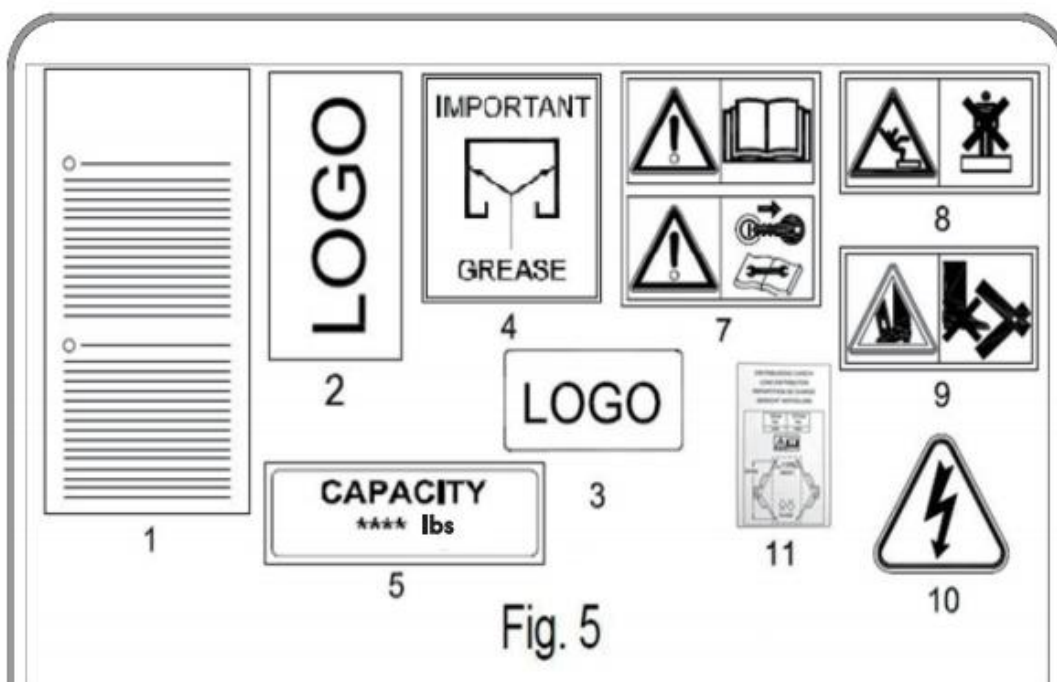

1.5 HAZARDOUS AREAS

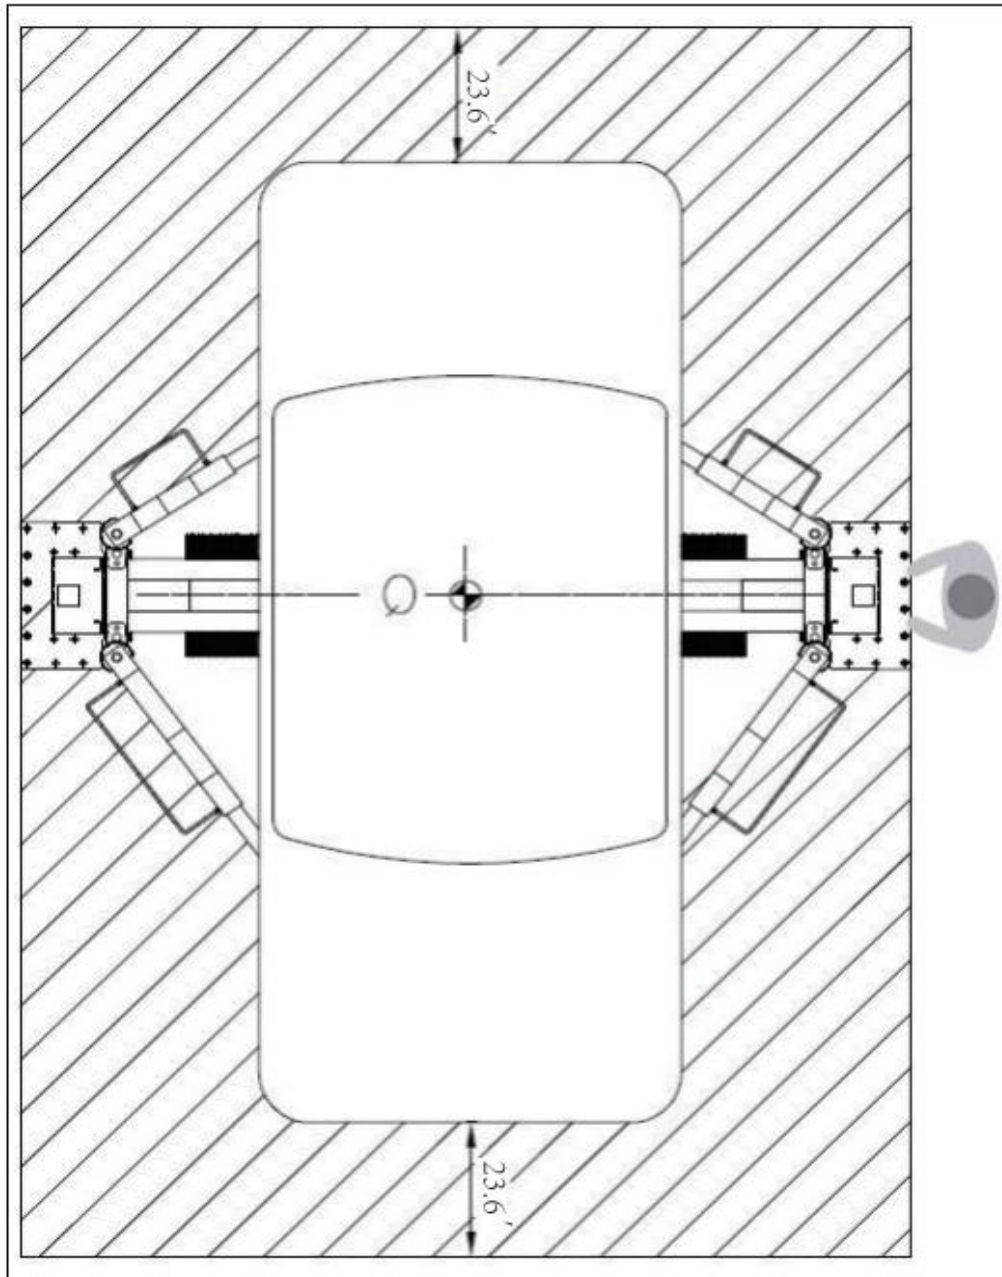

2 - FOREWORD

This manual includes the instructions relating to the installation, use and maintenance of the lift system called "Vehicle Lift". The vehicle lifts described in this manual are designed and constructed solely to lift vehicles for repair, maintenance and inspection purposes. Lift operation, economy and duration depend on the compliance with the instructions given in this manual. The parts that can be supplied also as spare parts are listed in the last section of the manual. To make instructions reading easier, " Vehicle Lift " will be here simply called "lift".

The instructions given in this manual shall be respected: the Manufacturer will not be held responsible under any issue arising from negligence, from non-compliance with the instructions and from an improper use of the lift. Failure to comply with the instructions given in the manual makes the warranty directly become null and void.

The Company also disclaims any liability for damages caused by lift improper use and/or due to changes made without the manufacturer's authorization.

3 - GENERAL SAFETY AND ACCIDENT-PREVENTION RULES

FOR A SAFE USE OF THE VEHICLE LIFT DESCRIBED IN THIS MANUAL

THE FOLLOWING IS ALLOWED:

Using lift only to lift vehicles for inspection, maintenance and/or repair operations.

Using lift only to lift vehicles respecting capacity limits and loads distribution indicated in this manual.

Only authorized personnel, in good health conditions, responsible and duly trained on the allowed uses and risks originated by lift use may operate the lift.

The operator is allowed to use the lift only after he has thoroughly read, understood and assimilated the contents of this manual. Using lift only inside closed premises, protected against atmospheric agents such as: rain, snow, wind, etc.

Only one operator at a time may use the lift in the safety position in the indicated area, close to the control panel

IS REQUIRED:

- Lift installation and maintenance operations shall be carried out by qualified personnel only, and in full compliance with the instructions given in this manual.
- Before installing lift, you shall check that the premises where you wish to position it are well aerated and lit. (avoid blinding light sources).
- You shall check that the floor where you wish to install lift is solid, flat, and perfectly levelled in all directions.
- You shall check that the floor has been constructed to withstand the max. allowed loads, including the lift, on lift resting areas.
- Lift shall be positioned far from heat sources or devices that could generate electromagnetic radiation.
- Lift shall be positioned so that, during standard operation, with the vehicle loaded on it, it does not interfere with or squash any nearby fixed or moving part. Take special care to power, water and gas systems.
- The lifting or handling operations of lift or of any lift parts shall be carried out under full safety conditions with suitable lifting equipment, as envisaged by the National prevailing regulations.
- Lift shall be secured to the floor only using anchors and screws of the type recommended by the manufacturer (for lifts, where envisaged).
- Before using the lift, the wholeness of lifting elements shall be checked.
- Before using the lift, you shall check that safety devices are perfectly installed and in good operating conditions.
- Vehicle shall be positioned as shown in the table of the manual and/or the table stuck to lift.
- Vehicle shall be lifted from the resting points specified by the vehicle manufacturer.
- When moving vehicle up, after the first 7.85" and before continuing the raising, load stability shall be checked in all directions.

- During the whole raising movement, load stability and lift correct and linear movement shall be checked.
- Before accessing the working area, lift shall be put in mechanical safety position with the special command (where applicable).
- Before accessing the working area, lift shall be disconnected from power sources by turning to 0 (zero) the lockable rotating disconnecter positioned onto control panel.
- You shall check that the disassembling of some of the parts of the vehicle positioned onto lift does not originate any load unbalance.
- Before starting lift lowering, you shall check that no people, animals or things that could interfere with the moving parts are under and around the working area.
- During lowering, you shall and constantly check lift and lift load movement. In case of failure, immediately turn emergency disconnecter.
- In case of irregular noise or operating failures, you shall stop lift operation, and check the cause of such irregularity. In case of doubt, contact the manufacturer's service department.
- Power supply shall be sectioned whenever adjustment, repair or maintenance operations have to be carried out on the equipment.
- All danger signaling decals present onto the lift shall be cleaned or changed.
- Lift shall be cleaned and all oil spots on the floor cleaned out, as they are very dangerous.
- All ordinary and extraordinary maintenance operations shall be and thoroughly carried out, as indicated in this manual; also periodical checks to be recorded on the special "inspection records" coming with the lift shall be carried out.
- You shall always use the manufacturer's original spare parts.

IT IS FORBIDDEN:

- It is forbidden to misuse lift as well as to use in any other manner not specified in the "INTENDED USE" section of this manual.
- It is forbidden to lift loads with just some of lift parts (one runway only, or two arms only).
- It is forbidden to install lift in hazardous premises containing inflammable and/or explosive substances, or where inflammable gases or vapors can be created.
- It is forbidden to install lift inside premises exposed to atmospheric agents.
- It is forbidden to install lift in premises where washing or sandblasting operations are carried out, or in very dusty premises.
- It is forbidden to install lift on vehicles or .
- It is forbidden to use lift in presence of strong magnetic fields.
- It is forbidden to use lift to lift objects other than the specified ones (cases, containers or pallets) or to use it as a hoist.
- It is forbidden to use lift to lift people or animals.
- It is forbidden to lift vehicles with people or animals onboard.
- It is forbidden to use the lift if the room temperature is below 41°F or above 104°F.
- It is forbidden to voluntarily cause load oscillations during raising or lowering maneuvers, or while load is lifted.
- It is forbidden to access work area under the lift without having enabled safety mechanical devices, and turned disconnecter to 0.
- It is forbidden to leave the lift unattended without having positioned it at the min. height or in mechanical safety position. Then section power supply, and lock disconnecter using a padlock.
- It is forbidden to remove or change lift protections or safety devices.
- It is forbidden to change lift or lift parts, any tampering with or change will immediately invalidate warranty, and will relieve manufacturer of any direct or indirect liability for damages due to such tampering or changing operations.
- It is forbidden to use parts or accessories not supplied by the manufacturer.

3.1 NOTES ON LIFT INSTALLATION

Set up a space suitable for the machine, and the working environment, by carefully evaluating the following aspects:

- The position shall be safe, free from any hinder, and protected against atmospheric agents. From the control position, the operator shall be able to see the whole system and the working area, and to immediately detect the presence of unauthorized persons and objects that could originate any danger.
- The min. distance of the hazardous area from the walls of the premises where the lift is installed shall be at least 70 cm. Lighting shall be good, but without blinding or intense lights, and there shall be no sources or processes that could develop gases or flammable vapors.
- Avoid wearing unsuitable clothing. They could get entangled in lift moving parts. As disposed by the National prevailing rule, besides wearing clothes suitable to the work site, the operator will have to compulsorily wear complementary protective accessories to prevent any injury, such as: helmet, goggles, gloves, suitable shoes, etc.

3.2 ENVIRONMENT AND POLLUTION

- Lift shall not be used for vehicle washing, degreasing, sandblasting and grinding.
- Comply with the National prevailing standards relating to the use and disposal of the products used for lift cleaning and maintenance, respecting the manufacturer's recommendations.
- Traps and drainage ditches shall discharge fluids, where and as indicated by the National prevailing standards.

3.3 LIFT SCRAPPING

As for products disposal upon lift scrapping, DO NOT disperse parts in the environment, but contact a company specialized in waste storage. To avoid any environmental pollution risks, take the following precautions:

- The oil contained inside hydraulic control unit, relative circuit and cylinders shall be fully collected. (if available).
- Disassemble lift parts by dividing them into groups of the same material in order to proceed to their separate disposal.
- Exhausted hydraulic oil, rubber parts, and iron scraps are special waste. Dispose of or temporarily store them in compliance with the National prevailing anti-pollution standards.

3.4 DANGER LEVELS

The removal or tampering with the safety devices involves a violation of the North American Safety Standards.

- The use of the machine is allowed only in places without risk of explosion or fire;
- The use of original accessories is recommended. Our machines are designed to accept only the original accessories;
- Installation must be carried out by qualified personnel in full compliance with the instructions below;

Check that during the maneuvers there are no dangerous conditions: stop the machine immediately if any functional irregularities are found, and contact the authorized dealer's assistance service

Pay special attention to the following danger sign when you find it in this manual, and follow the safety recommendations. Danger signals have three levels:

DANGER: this signal warns that, if the described operations are not carried out correctly, they cause severe injury, death or health long-term risks.

WARNING: this signal warns that, if the described operations are not carried out correctly, they may cause severe injury, death or health long-term risks.

CAUTION: this signal warns that, if the described operations are not carried out correctly, they may cause machine damage and/or personal injuries.

WARNING: carefully read the following rules; whoever does not put into practice the recommendations described hereinafter may be subject to irreparable damages or cause them to people, animals or property. The Company disclaims any and whatever liability arising from the failure to comply with the safety and accident-prevention rules described hereinafter. The Company also disclaims any liability for damages caused by lift improper use and/or due to changes made without the manufacturer's authorization.

WARNING

The equipment is intended to be used by only one operator at a time.

WARNING

Electrical system interventions, even minor ones, require the intervention of professionally qualified personnel (see specific legislation on the subject).

3.5 HAZARDOUS AREAS

Before using the lift, make sure that no unauthorized persons nor animals are present within the hazardous area delimited by the yellow stripe. Persons or animals shall by no means stop or pass within the hazardous area delimited by the yellow stripe, when using lift even for small movements, Each lift is supplied with the identification plates relating to the different versions.

3.6 Safety instructions for lifting machine

The safety information described in this manual applies to the lift (Figure 6) and warns of unsafe and dangerous situations. Warning labels and safety warnings should be kept clean. If they fall off or are damaged, they should be replaced immediately

Read the meaning of the safety instructions carefully and remember it

3.7 INTENDED USE


The lifts described in this manual are designed and manufactured for lifting vehicles for inspection, maintenance and/or repair purposes only.

The lift should be used only for lifting vehicles within the load capacity limits given in the IDENTIFICATION PLATE and in the paragraph 1.3 "LOAD DISTRIBUTION"

CAREFULLY READ THE INSTRUCTIONS GIVEN IN THIS MANUAL BEFORE USING THE LIFT

4 – TRANSPORT AND INSTALLATION

Since the lift is packed in a special wooden crate, it can only be handled using a pallet truck or fork-lift truck, fitting the forks into the slots as shown in figure 2.

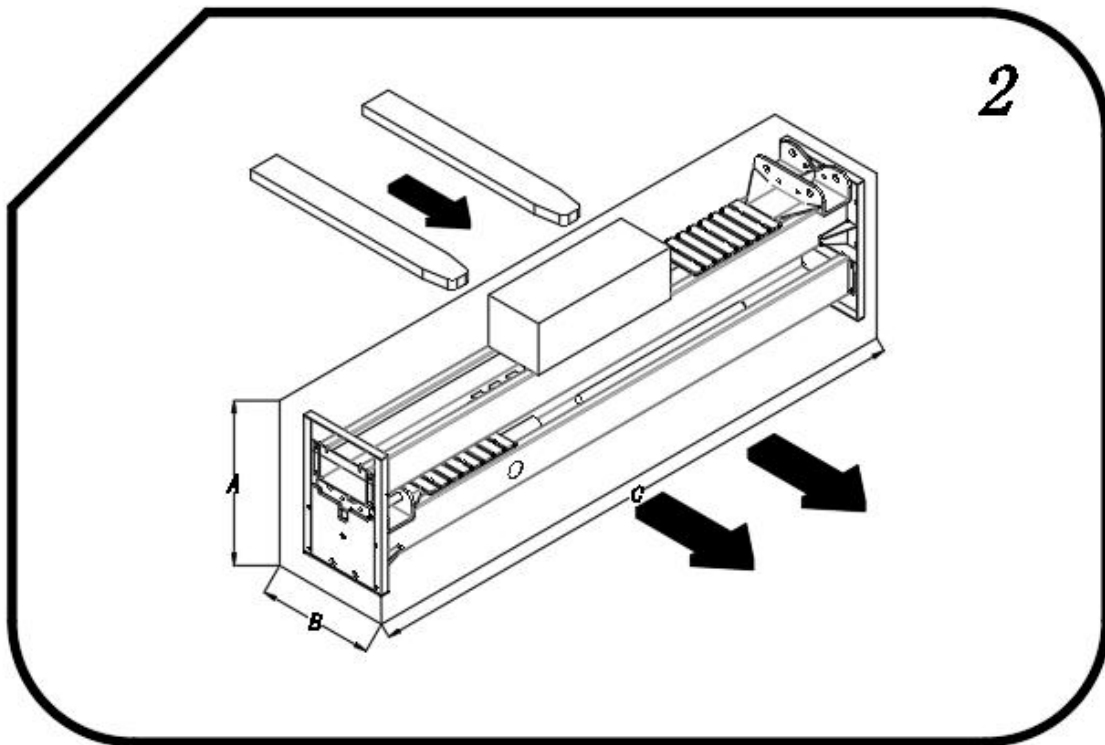

	Package size:	Package size of pump station
A	27.55"	12.2"
B	17.7"	11"
C	112.2"	31.5"

4.1 UNPACKING

After removing the packing materials, carefully inspect the various components of the equipment, checking for any visibly damaged parts (control unit, lift frame). Don't leave the packing materials to the place children can get access to. In case of damage do not use the equipment (the lift) and call in a qualified technician (your local dealer).

The packing materials (plastic bags, expanded polystyrene, nails, screws, wood blocks etc.) must never be left within the reach of children as they constitute a potential hazard. Dispose of these materials in the designated collection centers if they are polluting or non-biodegradable.

BEFORE INSTALLATION









The following tools and equipment are needed:

- 3/4"Concrete drill
- Hammer(14 oz.min.)
- Level (4-ft minimum)
- Inch &Metric combination wrench set, 3/8"to 1 1/8"(10 to 32 mm)
- Ratchet &Sockets sized as above
- Inch &metric hex key set, 3/32"to 3/8"(2 to 10 mm)
- 10"Adjustable wrench
- 14"Pipe wrench
- Needle nose pliers
- Flat pry bar(for installing shims)
- Chalk Line
- Tape Measure 25'
- Locking Pliers(vice grips)
- ISO VG32 Hydraulic Oil

This lift requires 220VAC 20A max.Fuse at 60 Hz single-phase.Wiring must meet code.Please ensure that all wiring is capable of handling the loads and voltages applicable.The wiring of this device must be done only by a qualified electrician to ensure that you meet your local electrical code.

SHIPMENT CHECKLIST



- 4-Arms (2 long symmetrical and 2 short three stage)
- 4-Arm Pins(1-1/2"diameter)
- 4-Lift pads
- 3-Hydraulic Hoses(1 long, 2 short)
- 1-Set of 4 Drop-in Extensions(Optional)
- 1-Overhead Cross Bar(complete with bolts)
- 2-Columns(complete with rams,carriages and cables)
- 2-Extended Column
- 10-Anchor Bolts
- 1-Hydraulic Power Pack
- 1-Document Envelope
- 1-Electric limit switch/cable,bar and brackets(for overhead travel limit)
- 2-Anti collision rubber
- 4-Anti pressure foot guardrail(Optional)

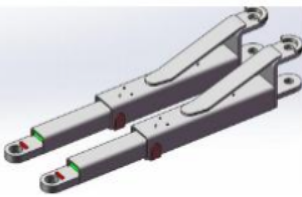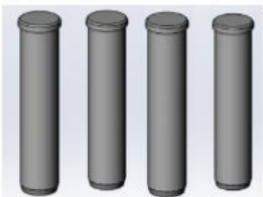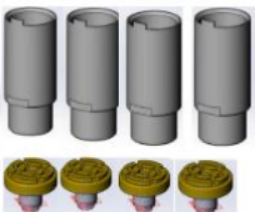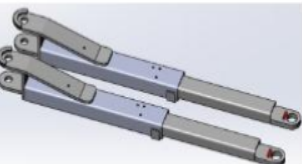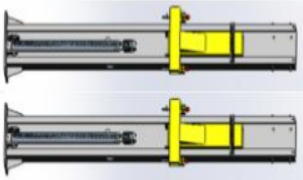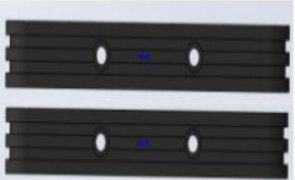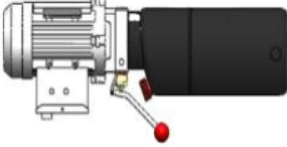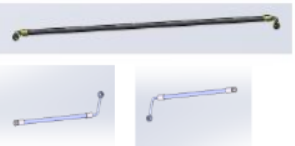
4.2 INSTALLATION AREA

An area of at least 170.5" x 157.5", with a ceiling height of at least 165.35", is required for installation of the lift. From the operator position, the operator is able to monitor the entire lift and its surrounding area. He must ensure that there are no unauthorized persons, or objects which may cause hazards, in this area.

Before installing the lift, check the specifications of the supporting surface available, or prepare a surface with the minimum characteristics stated below

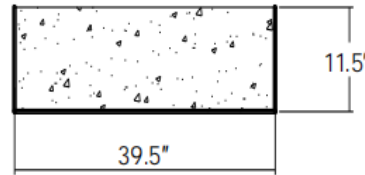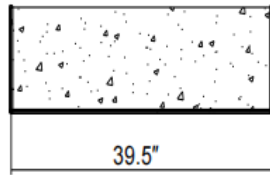

Dimensions 39.5"x39.5" (figure 3)
 .Depth 11.5"
 Concrete class 3500 PSI.
 Reinforcement ASTM A615 Grade 60.

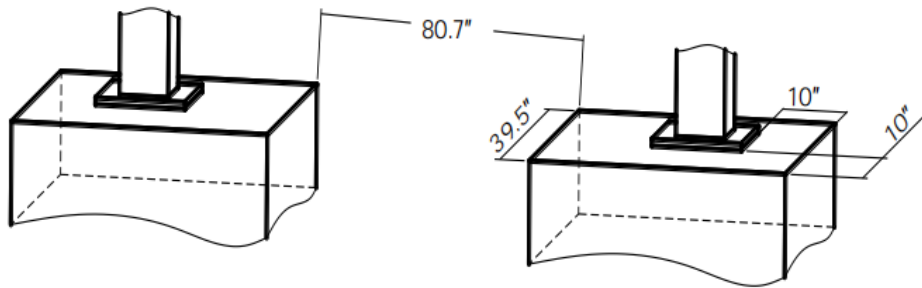

The lift must be fixed to this surface using heavy-duty anchor fixtures as described in the "Anchor Bolt Installation Procedure" section of the manual.

The said surface must be capable of supporting at least 355 PSI and have a strength rating of at least 3500PSI. The layer of concrete must be sufficient to ensure effective installation of the anchor bolts, and have a good structure to a depth of at least 5.5".

If a surface of this kind is not available, two separate foundation plinths can be constructed. The minimum characteristics required are:



The floor must be able to with stand a load equal to the sum of the weight of the lift itself and the maximum payload, bearing in mind the lift support surface area and anchor fixtures used.



The installation procedure foresees the use of the accessory plugs kit (optional) ,for equivalent models refer to the table below and/or to the technical sheets of the product used.



Type	specification	Min installation depth	Torque(FT LBS)	Extractionforce(lbf)
PZLS3/4"x6-1/4"	3/4"	5.5"		3866

4.3 INSTALLATION

After unpacking, handle the columns with the aid of suitable slings

Anchor bolt installation procedure:

- Place the two columns in the installation zone.
- Straighten the columns to the vertical position .each column must be plumb (vertically level) on all four sides.maximum allowable deviation: $\leq 1/8$ inch per 2 foot.And then position them so that they are properly aligned with the distance between them (fig. 3),the distance dimension error between the inner surfaces of two columns shall not exceed 1/8 inch.

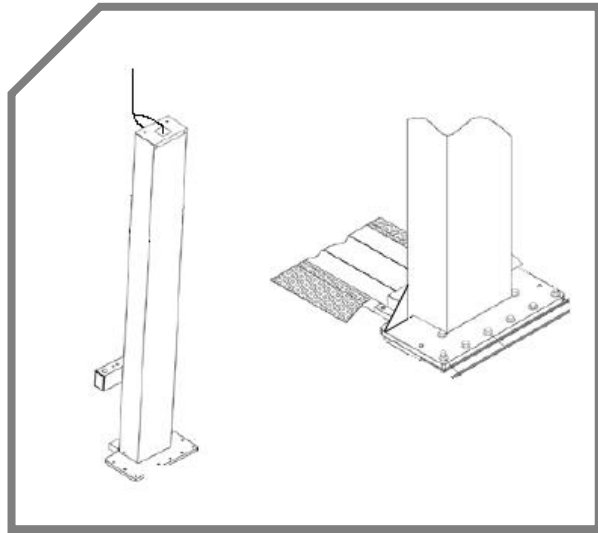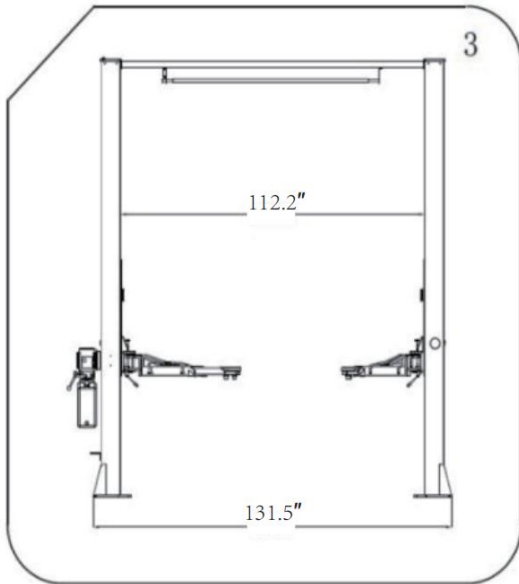

- If necessary place shims underneath the bases of the columns so that they are firmly supported and the columns are perfectly vertical.



- Connect the two sections of the overhead bar according to Figure 6, and connect the two ends of the overhead bar to the two columns according to Figure 7

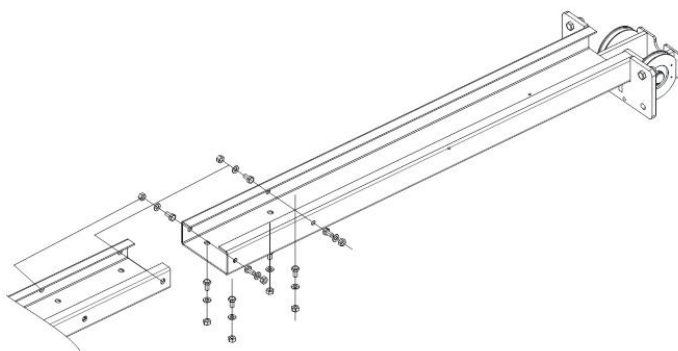


Figure 6


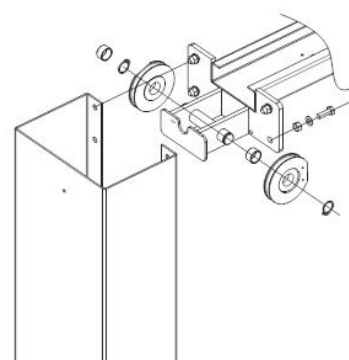


Figure 7

- Use a drill bit $\varnothing 18$ to drill holes at least 5.5" deep, and clean the holes thoroughly.
- Fit PZL3/4"x6-1/4" equivalent anchor bolts in the holes and then tighten with a torque wrench set at 95FT LBS: first place the thick washer provided with the fixing kit between the anchor bolt washer and the pillar base plate.

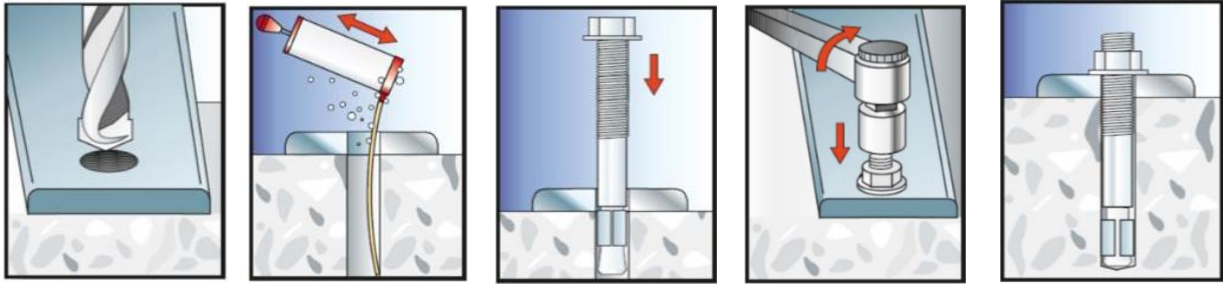

After a few cycles with full load, check that the anchor bolts are still firmly tightened. This check must be repeated every 3 months.

WARNING

The manufacturer disclaims responsibility for any damage caused by failure to comply with the above instructions, which may void the warranty

4.4 CONNECTING TO THE ELECTRICITY MAINS

The lift must be connected to the mains electricity supply by the customer.

To connect to the electricity supply, use a 2 core + earth cable with cross section of 14AWG for the 220V version

The cable must be completed with a main plug of the type in use in the country where the lift is installed.

The lift is fitted for the mains connection cable to arrive from below, but it can also be received from above.

MONO-PHASE CONNECTION:

Once the passage of the cable has been carried out, it must be suitably stripped, the ends of the unsheathed wires and provided with insulating bushings and the appropriate wires.

It should be remembered that the existence of the PE connection is required by UL201+NFP79, so it is absolutely necessary to make it used. The conductor must be connected as shown in Figure 16: the phase conductor L1 and N1.

the neutral point n are at the terminals of the differential switch QF, and the PE grounding conductor is connected to the special grounding terminal (Figure 15) Connect the wires from the motor to the L1 and N1 positions on the terminal board, and connect the PE grounding conductor to the special grounding terminal (Figure 15)

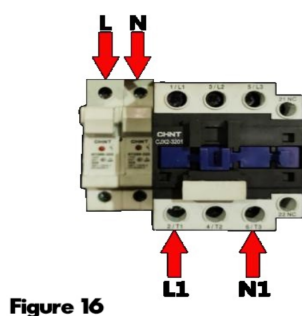


Figure 16

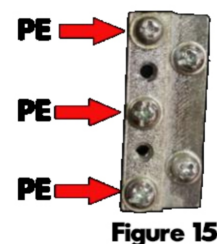


Figure 15

WARNING

The manufacturer declines liability for any damages resulting from failure to follow the above instructions, which may invalidate the warranty.

Before supplying power to the lift, make the following checks:

- Check that the power supply voltage and frequency correspond to the values stated on the rating plate.
- Check the condition of the conductors and ensure that the earth conductor is present.
- Ensure that there is an overcurrent protection device installed, and equipped with a RCD/GFCI breaker.
- Connect the wires of the equipment to the power socket, connect the single-phase L, N and grounding wires with great care, and comply with the current regulations

WARNING

The manufacturer declines liability for any damages resulting from failure to follow the above instructions, which may invalidate the warranty.

WARNING


Any connections to the workshop electrical panel are the customer's responsibility, and must be made by staff qualified in accordance with the relevant legal requirements.

4.5 HYDRAULIC CONNECTION

- Install the pump station and connect the limit switch line
Open the motor control box cover according to the diagram, remove one of the wires, and then expose the limit switch wire core according to the diagram. After passing through the control box, connect the two ends according to the diagram.



- short oil pipe connection, connecting the oil outlet of the pump station and the tee joint of the column.
- connect the long oil pipe and connect the tee of the column and the joint of the auxiliary oil cylinder.

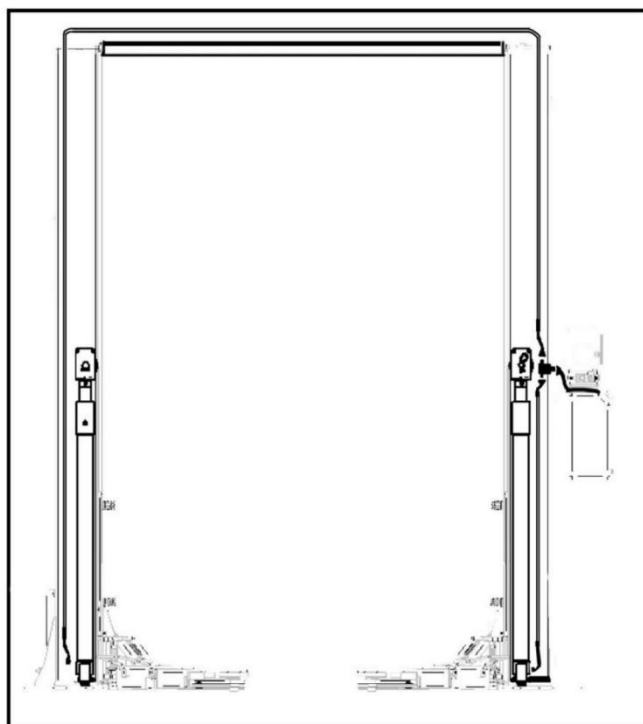

Note: when connecting the oil pipe, please use two wrenches to fix it at the same time to avoid oil leakage of the oil pipe joint due to loose fixation




Check that there is no oil leakage, if necessary, turn off the power and tighten the loose hydraulic connection

The lifting machine requires ISO vg32 viscosity hydraulic oil, which is not provided with the machine (optional), unscrew the filler cap and pour 9 L of hydraulic oil into the oil bucket

4.6 CONNECTION CABLES OF SYNC

- Check the accessories of the lift to ensure that nothing falls off the lift.
- Lift the two carriage onto the first lock tooth position.
- Starting from the left side, pull the wire rope on the column to the top pulley, then pull it to the bottom pulley, cross the floor to the opposite column, and then pull it to the pulley.
- You will see a locating hole. Put the wire rope through the hole and install the nut to lock it. Adjust the two 3/4" nuts to ensure that they are equally tightened. The wire rope needs to be adjusted to make it firm, not loose or too tight. After the hydraulic system and the electrical system are connected and the lift is ready to start operation, these need to be adjusted. Until the pulleys on both sides are completely synchronized.

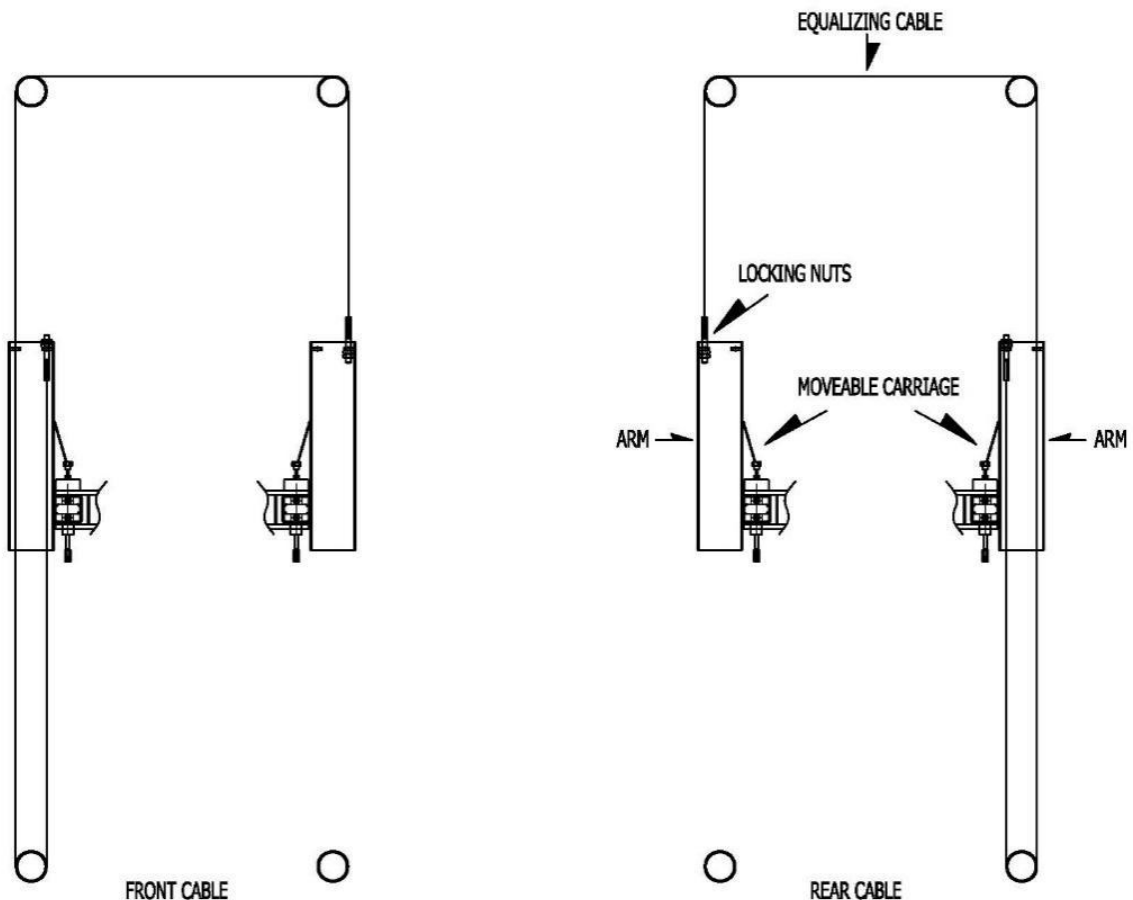

4.7 ARM LOCK TEETH ADJUSTMENT

Loosen the nut of the lock teeth in the picture, adjust the front and rear positions of the lock block to make the spacing between the lock teeth appropriate, ensure that all lock teeth are in contact, and tighten the nut.

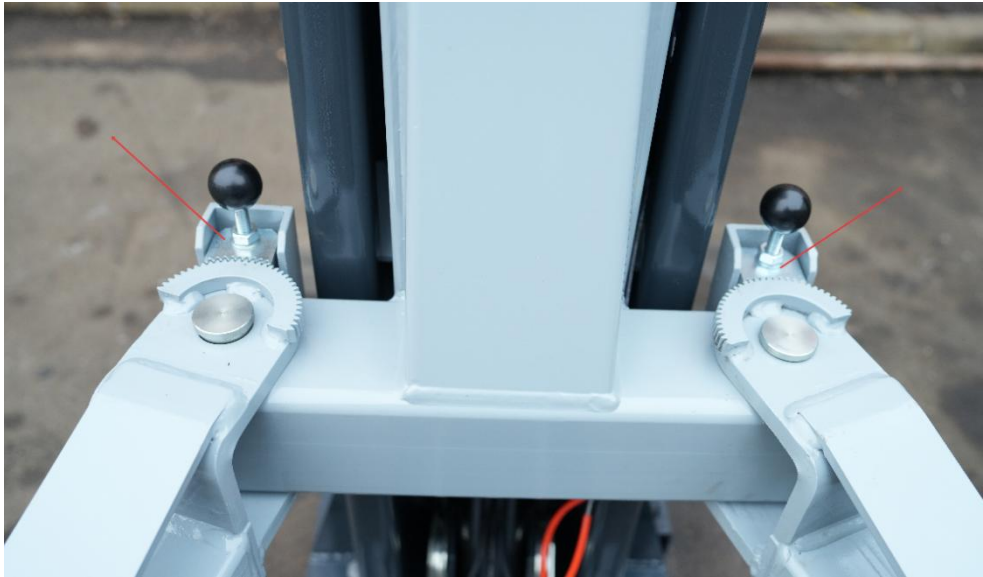


Figure 8

4.8 CHECK THE MOTOR ROTATION DIRECTION

Use the up button. If the slide does not move up, please exchange two wires inside the power cord plug. This operation can only be carried out by qualified electricians in the event of a power outage.



WARNING

The motor rotation direction must be checked whenever the lift's power source is changed.

4.9 BLEEDING THE HYDRAULIC SYSTEM

When the equipment is in use, tear off the label of the air hole on the cylinder.

5 – INSTRUCTIONS FOR USE

5.1 START UP



WARNING

The lift must be put into service by specially trained personnel, in order to assure the correct functioning of the lift itself and all its mechanical and electrical safety systems.

The instructions to be followed are provided in the final section of this manual, for the use of the technicians who carry out the start-up procedure only.

No work on the part of the staff that does not belong to the after-sales service of the manufacturer must be permitted.



WARNING

The manufacturer declines liability for any damages resulting from failure to follow the above instructions, which may invalidate the warranty.

5.2UTILIZATION

The machine must only be used by authorized personnel. Use by personnel who are not familiar with the procedures specified in this manual could be dangerous.

The operation of the machine is as follows:

Vehicle positioning

When positioning the vehicle over the pads, pay attention to the following recommendations:

- the total weight of the vehicle must not exceed 10000lbs
- place the vehicle on the pads, making sure that it is aligned and centered with respect to the longitudinal axis of the lift.
- the maximum load of 10000lbs must be distributed on the four vertices of a rectangle having a transverse dimension of 39.37" and a longitudinal dimension of 70.85". For lower transverse distance values and / or longer longitudinal distance the lift capacity is reduced. In these cases or in other cases not covered by this manual it is advisable to contact the manufacturer.
- the use of accessories not authorized by the manufacturer to modify the support distances of the lifting pads is forbidden.
- The method of lifting the load must not present dangers and must observe the rule that requires stopping after a short lift to check that the vehicle is correctly positioned and in a safe condition.

The Manufacturer disclaims any and whatever liability for damages to persons, animals or property arising from non-compliance with the instructions given herewith and/or from an improper use of the lift or any use other than specified in this manual.

To lift vehicle, proceed as follows:


- Check that the arms are turned in a way that will not hamper the vehicle access between the lift columns.
- Turn the arms and pull out the extensions bringing the pads to the points designed for lifting the vehicle as indicated by the vehicle manufacturer.

WARNING:

Before lifting a vehicle, always check the load distribution with respect to the vehicle mass, strictly complying with the LOAD DISTRIBUTION table (Fig. 3). Do not lift the vehicle in case the values found are not within the limits given in the LOAD DISTRIBUTION table.


Lifting of the vehicle

press the power unit button (1) to lift about 12" and check whether the support point is correct; If correct, continue lifting until the required working height is reached (carefully check the stability of the load during the whole lifting process if the stability of the vehicle is poor or the operation of the lift itself is abnormal, please stop the motor climbing immediately, wait for the load to stabilize and continue to slowly descend to the ground. Reposition the vehicle correctly. If the cause of instability proves to be technical, stop the use of the lift.

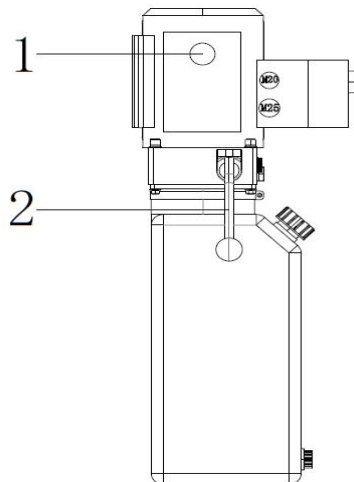

Descent of the vehicle

press the power unit button to lift 5cm , and pull the unlocking ropes on both sides to release the locks on both sides.

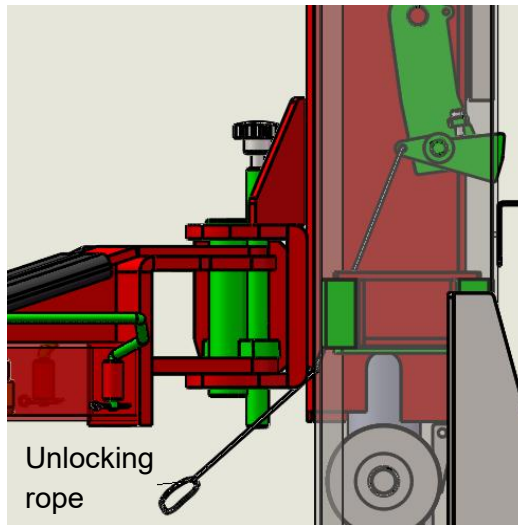

Press the power unit pressure bar (2) to realize the lowering
Carefully check the stability of the load during the whole descent
If it is found that the vehicle is unstable or the lifting machine operates abnormally, stop the operation immediately, wait for the vehicle to stabilize and continue to descend to the ground. Reposition the vehicle take-up points correctly. If the cause of instability proves to be technical, stop operating the lift



WARNING

The vehicle must only be lifted to the lifting points prescribed by the vehicle manufacturer.

For assistance, contact authorized centers and request the use of original parts.

5.3 EMERGENCY PROCEDURES

These modes are intended for handling emergency situations which may arise due to malfunction, incorrect loading, power failure, etc.



WARNING

Never leave a manual emergency operation on hold as the lift could slowly misalign. Stop or cancel the manual emergency operation, if necessary.



This maneuver can only be carried out in the presence of the manual pump (optional)

The purpose is to enable the operator to retract the runways of the lift in order to allow for removal of the vehicle. Emergency procedures may be executed by the user, but we recommend contacting our technical service department to clear up any uncertainties first.

Emergency procedures are potentially hazardous and must be executed with extreme caution: make sure that all persons are at a safe distance from the lift before proceeding.

Manual Emergency Maneuver

To carry out the descent of the lift when an interruption of the supply of electric current occurs, proceed as follows:

1. Switch off the power supply ;
2. Ascent using the hand pump (optional) until the mechanical safety devices are released ;
3. Pull the unlocking rope on both sides to open the lock teeth;
4. Pressure rod of manual light pressure hydraulic unit by letting the carriages descend gently up to the position on the ground;
5. At the end of this maneuver restore the conditions of use (restore the power supply) ;



WARNING

Never leave a manual emergency operation on hold as the lift could slowly misalign. Stop or cancel the manual emergency operation, if necessary.

6 - MAINTENANCE

To guarantee the efficiency of the machine and its correct functioning it is essential to follow the following instructions:

- Once a month lubricate the chain with ISO V G 3 2 orequivalent oil;
- Check the efficiency of the ground fixing every 3 months by checking the tightening torque of the plugs:
95FT LBS for M16 plugs;
- lubricate the sliding block with lithium grease and check whether the sliding block works normally
- Check the correct functioning of the pulleys.
- Check the level of OIL in the hydraulic power unit reservoir.
- The wire rope should be coated with oil every six months. It is recommended to replace the wire rope after about three years. If more than three steel wires are found to be broken, they should be replaced in a timely manner.
- Clean the hoist paying particular attention to any foreign objects that may cause malfunctioning of both mechanical and electrical safety devices.



ISO VG32 hydraulic oil degrades and should be replaced annually at minimum .

Note: after installation, the machine needs to use lithium grease to lubricate and maintain the wire rope, sprocket, chain and slider

Cleaning

To clean the machine (columns and plastic covers) use only a soft cloth, if necessary soaked in non-aggressive detergent. Do not use solvents (petrol, turpentine, acetone and the like). Cleaning the space between the columns should be done simply by sweeping away the dirt.



WARNING

Never use pressurized water (eg water cleaners) to clean the machine.

STORAGE

If the lift is to be out of use for a long period of time, it must be disconnected from the electricity supply and any parts which might be damaged by dust must be protected.

ENVIRONMENTAL INFORMATION

The disposal procedure described below must only applies to machines with the symbol of the waste bin with a bar across it on their rating plates

This product may contain substances which may cause damage to the environment and human health if not disposed of properly.

We are therefore providing you with the information below in order to prevent these substances from being released into the environment, and to improve the use of natural resources.

Electrical and electronic equipment must not be disposed of with ordinary municipal waste; it must be disposed of separately by authorized facilities.

The symbol of the waste bin with a bar across it, which appears on the product and on this page, reminds users that the product must be disposed of properly at the end of its working life.

This prevents the inappropriate disposal of the substances which this product contains, or the improper use of some of them, from having hazardous consequences for the environment and human health. It also helps to ensure the recovery, recycling and reuse of many of the materials these products contain.

To allow this, the producers and distributors of electrical and electronic equipment organize special systems for the collection and disposal of such equipment.

At the end of the product's working life, con-tact your dealer for information about disposal procedures.

When you purchase this product, your dealer will also inform you that you may return another worn-out appliance to him free of charge, provided it is of the same type and has provided the same functions as the product just purchased.

Anyone disposing of the product otherwise than as described above will be liable to prosecution under the legislation of the country where the product is scrapped.

We also urge you to adopt other environment-friendly practices: recycle the internal and external packaging which

comes with the product and dispose of spent batteries (if the product has them) properly. With your help, we can reduce the amount of natural resources used to produce electrical and electronic equipment, minimize the use of landfills to dispose of old products, and improve quality of life by preventing the discharge of potentially hazardous substances into the environment.

FIREFIGHTING EQUIPMENT TO BE USED

For guidance on the most suitable type of ex-tinguisher, refer to the table below:

	Dry materials	Inflammable liquids	Electrical equipment
Water	YES	NO	NO
Foam	YES	YES	NO
Powder	YES	YES	YES
CO ₂	YES	YES	YES

YES* Can be used if more suitable equipment is not available, or for small fires.



WARNING


The information in this table is of a general nature and is intended to provide users with general guidance. Contact the manufacturer for details of the applications of each type of extinguisher.

7 – PROBLEM SOLUTION


Problem	Cause	Solution
No operation	Electrical system failure	Exchange the wiring positions of two power supplies
The lift does not complete the lifting stroke	Load exceeding the maximum flow rate	Check the maximum capacity of the lift
	Supply voltage too low	Check the supply voltage
	Low oil level	Fill the oil level
Noise during the ascent or descent movement	Mechanical parts (pulleys, sliding pad) without lubrication	Provide for lubrication
Lift can not completely lower down.	The mechanical locking teeth are not opened	Check whether the mechanical locks on both sides are fully opened
Poor synchronisation of the carriage	Cable need to adjust	Adjust the nut on the ropes
The lift struggles to up and to down	The down (YV1) valve is open or damaged	Disconnect the down valve and clean it. If it is damaged proceed with the replacement
Oil leakage from connections	Loose fittings.	Tighten fittings, replace if necessary
When the lifting machine releases the lifting button, lifting machine automatically descends	Sealing problem of one-way valve	Unscrew the one-way valve, check and clean it, then tighten it
Other		If you cannot resolve the problem, contact our service.

8 – DIAGRAMS


8.1 ELECTRICAL SCHEMATIC DIAGRAM 220V-1PH

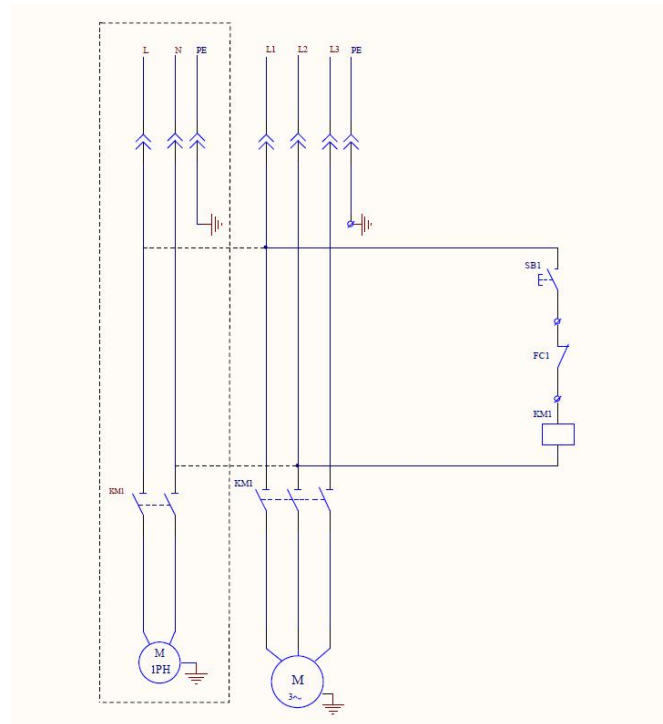

8.2 HYDRAULIC SCHEMATIC DIAGRAM

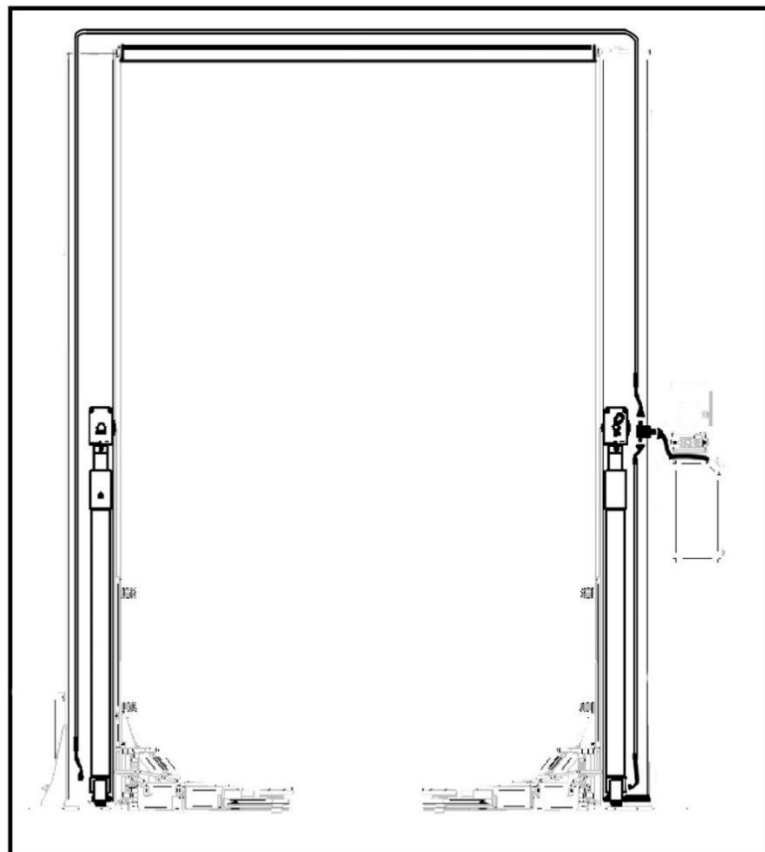

8.3 HYDRAULIC DIAGRAM

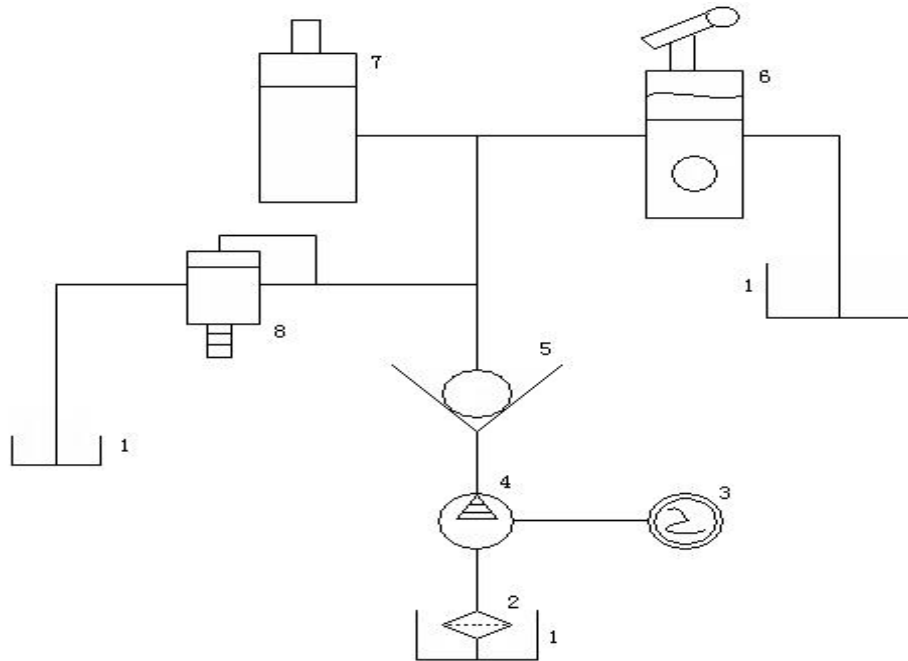

1.tank	2.Mesh oil filter tlw-12
3.Motor y90l-4	4.Oil pump cbn-e3
5.Check valve	6.Manual control valve
7.Cylinder	8.Relief valve


PROCEDURE FOR THE ADJUSTMENT AND TESTING OF THE LIFT

RESERVED FOR THE INSTALLER TECHNICIAN
(to be carried out scrupulously by the installer at every point)


• ADJUSTMENT OF MECHANICAL ALIGNMENT OF TROLLEYS

1. press the up button and check the correct direction of rotation of the motor (the carriages must rise) otherwise change two phases on the terminal board.
2. lift the carriages to about 50 cm and measure the height. If there is a difference, tension the synchronism cables.


Exploded View

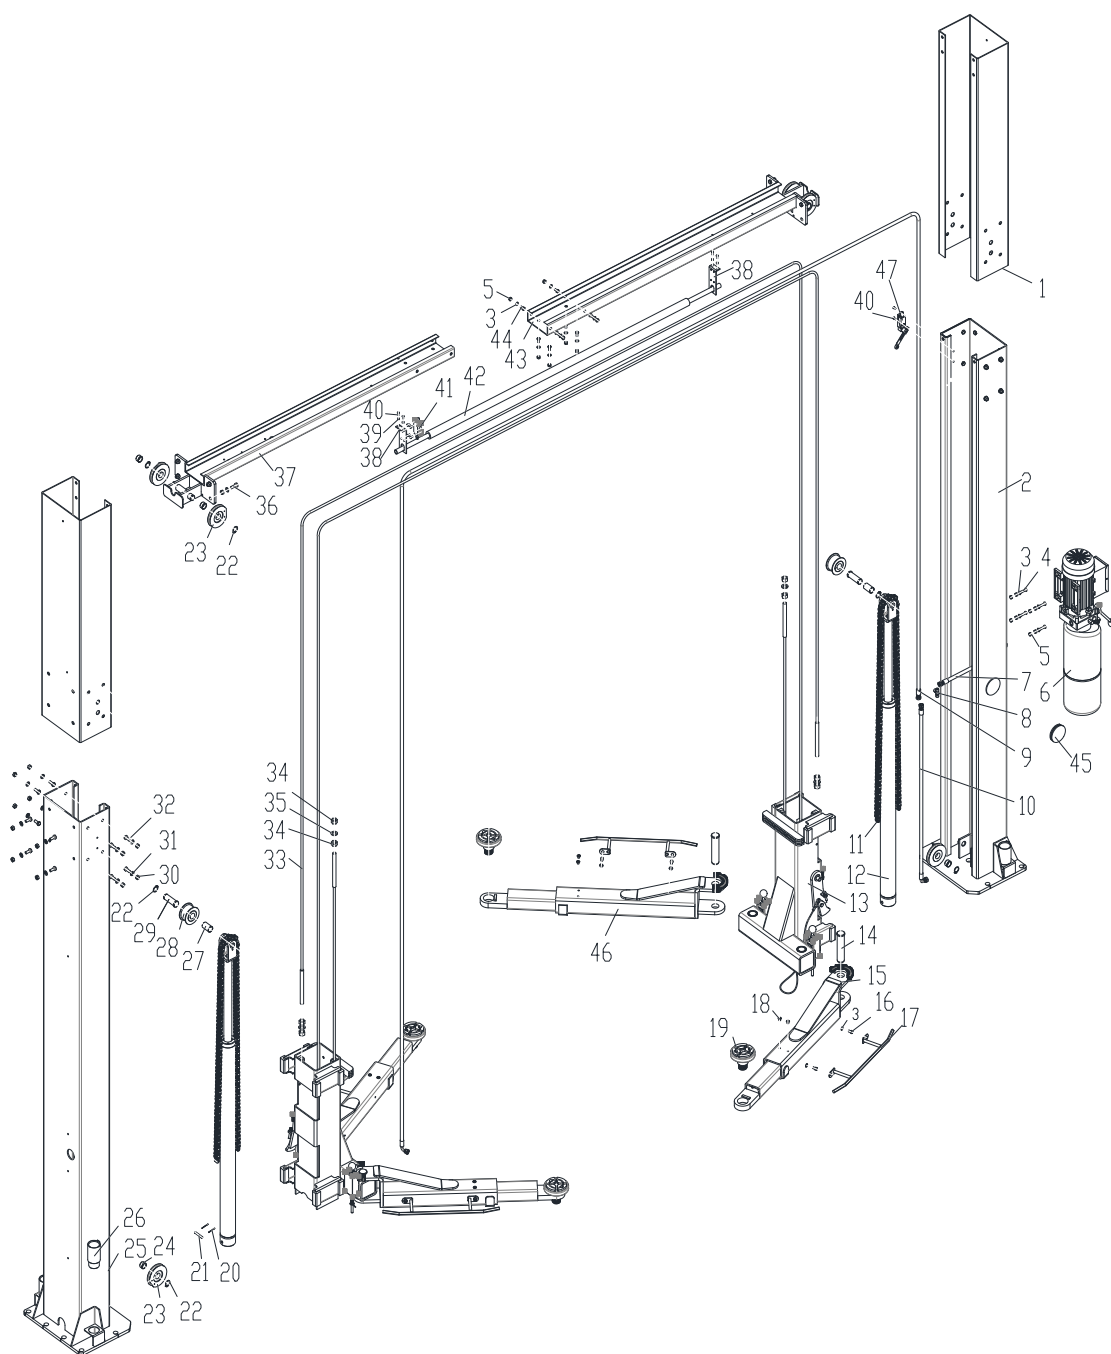


No.	Name	Model	Quantity
1	Column extension component	J2620-1300000	2
2	Main Column Welding Assembly	J2620-1100000	1
3	Washer 8	GB/T97.1-2002	20
4	Bolt M8X25	GB/T5783-2000	4
5	Nut M8	GB/T6170-2000	16
6	Hydraulic Pump Station	J1610-5000300	1
7	Oil Pipe ZW400	J2620-5000300	1
8	Join 9/16	J2620-5000401	1
9	Oil Pipe ZW9450	J2620-5000100	1
10	Oil Pipe ZW950	J2620-5000200	1
11	Chain	BL644X131	2
12	Cylinder Assembly	J2620-5000400	2
13	Tubular Trolley Assembly	J1610-2000000	2
14	Arm Lock Shaft	J1610-3000003	4
15	Tubular Short Arm Assembly	J1610-3000200	2
16	Screw M8X12	GB/T70.1-2008	8
17	Anti-Crush Foot Pad	J1610-3000004	4
18	Screw M8X10	GB818-M8X10	8
19	Small Spiral Pallet	J1610-3000010	4
20	Cotter Pin 2X30	GB/T91-2000	4
21	Chain Fixing Pin Shaft	J1610-1000004	2
22	Retaining Ring 25	GB/T894.1-1986	8
23	Notched Sheave	J1610-1000005	6
24	Oil-less Bearing Bronze Bushing	2515	6
25	Secondary Column Welding Assembly	J2620-1200000	1
26	4" Height Extension Section	J1610-3000001	4
27	Oil-less Bearing Bronze Bushing	2545	2
28	Cylinder Head Shaft	J1610-5000402	2
29	Cylinder Top Wheel	J1610-5000401	2
30	Nut M10	GB/T6170-2000	32
31	Washer 10	GB/T97.1-2002	32
32	Bolt M10X25	GB/T5781-2000	24
33	Steel Wire Rope	J2620-1000300	2
34	Nut M16	GB/T6170-2000	8
35	Washer 16	GB/T97.1-2002	4
36	Bolt M10X30	GB/T5781-2000	8
37	Cross beam 1	J2620-4000100	1
38	Limit rod bracket	J2620-4000300	2
39	Nut M5	GB/T6170-2000	4
40	Screw M5X12	GB/T818-2000	10
41	Limit switch 8112	YBLX-ME8112	1
42	Crossbar	J2620-4000400	1
43	Cross beam 2	J2620-4000200	1
44	Bolt M8X16	GB/T5781-2000	8
45	Rubber Plug	J1610-1000001	2
46	Tubular Long Arm Assembly	J1610-3000100	2
47	Limit switch 8108	YBLX-ME8108	1

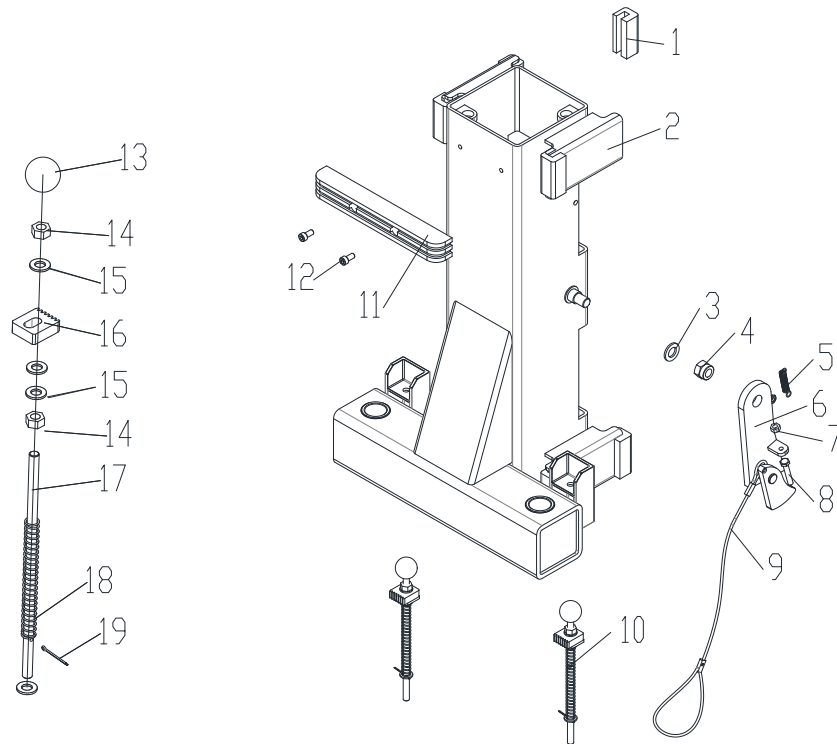

No.	Name	Model	Quantity
1	Nylon Slide Block	J1610-2000001	16
2	Tubular Trolley Welding Assembly	J1610-2100000	2
3	Washer 16	GB/T97.1-φ 16	2
4	Nut GB/T889.1/M16	GB/T889.1-M16	2
5	Lock Plate Tension Spring	J1610-2300001	2
6	Two-Column Lock Assembly	J1610-2300000	2
7	Nut M8	GB/T6170-M8	2
8	Bolt M8X45	GB/T5783-M8X45	2
9	Cable Lock Assembly	J1610-2300002	2
10	Arm Lock Assembly	J1610-2200000	4
11	Anti-Collision Rubber Block	J1610-2000002	2
12	Screw M8X16	GB/T70.1-M8X16	4
13	M10 Hand Knob	J1610-2200001	4
14	Nut M10	GB/T6170-M10	8
15	Washer 10	GB/T97.1-φ 10	16
16	Swing Arm Lock Tooth	J1610-2200002	4
17	Lock Rod	J1610-2200003	4
18	Ejector Rod Compression Spring	J1610-2200004	4
19	Cotter Pin 2X30	GB/T91-2X30	4

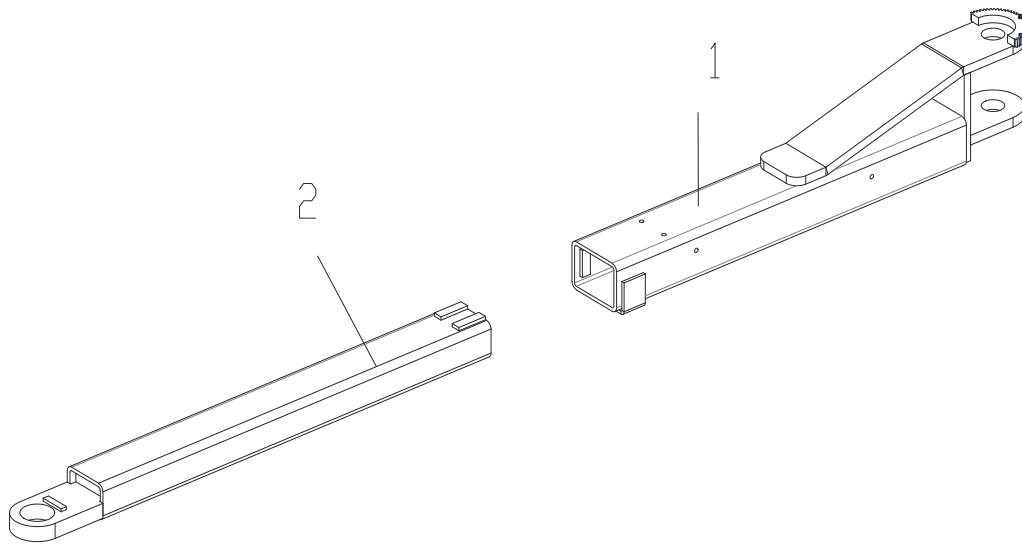

No.	Name	Model	Quantity
1	Tubular Long Outer Arm Welding Assembly	J1610-3000110	2
2	Long Inner Arm Welding Assembly	J1610-3000120	2

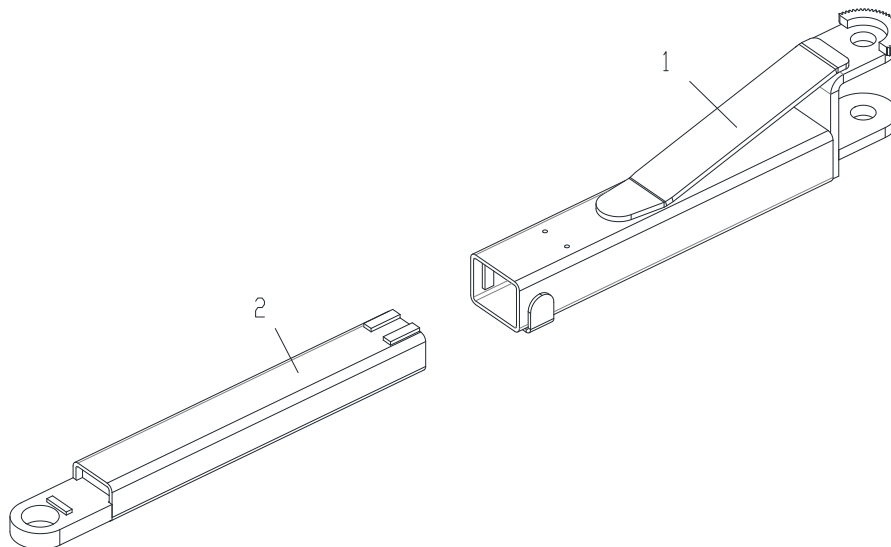

No.	Name	Model	Quantity
1	Tubular Long Outer Arm Welding Assembly	J1610-3000210	2
2	Long Inner Arm Welding Assembly	J1610-3000220	2

Note